

The Samsung logo, consisting of the word "SAMSUNG" in white, uppercase, sans-serif font, centered within a black, horizontally-oriented oval.

User's Manual_____


DVD-V6700

Safety Instructions


The following illustrations represent precautions.




The lightning bolt is a warning sign alerting you to dangerous voltage inside the product.
DO NOT OPEN THE DVD-VCR. Refer to service personnel.

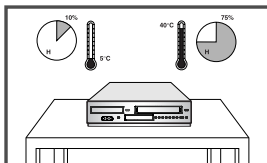


DO NOT expose the DVD-VCR to extreme temperature conditions (below 5°C and above 40°C) or to extreme humidity conditions (less than 10% and more than 75%).

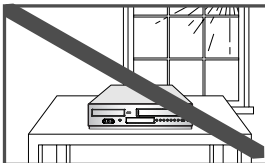


DO NOT expose the DVD-VCR to direct sunlight.

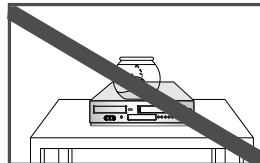


DO NOT expose the DVD-VCR to any liquids.

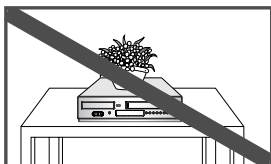

DO NOT place any objects on the DVD-VCR or remote control.

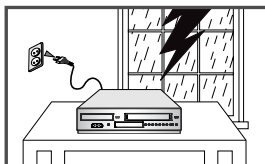

During a storm and/or lightning, unplug the DVD-VCR from the mains jack and aerial.

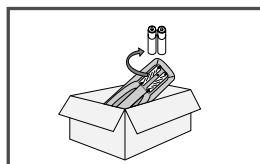

If the remote control is not used for a long period of time, remove the batteries and store it in a cool, dry place.



THIS DEVICE IS NOT FOR USE IN INDUSTRIAL ENVIRONMENTS

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembling is prohibited.

1. Apparatus shall not be exposed to dripping or splashing and no object filled with liquids, such as vases, shall be placed on the apparatus.
2. The Mains plug is used as a disconnect device and shall stay readily operable at any time.





Disc Type and Characteristics

This DVD-VCR is capable of playing the following types of discs with the corresponding logos :

Disc Types (Logos)	Recording Types	Disc Size	Max. Playing Time	Characteristics
DVD 	Audio + Video	12 Cm	Single-sided 240 min. Double-sided 480 min.	<ul style="list-style-type: none"> DVD contains excellent sound and video due to Dolby Digital and MPEG-2 system. Various screen and audio functions can be easily selected through the on-screen menu.
		8 Cm	Single-sided 80 min. Double-sided 160 min.	
AUDIO-CD 	Audio	12 Cm	74 min.	<ul style="list-style-type: none"> CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.
		8 Cm	20 min.	

- DO NOT play CD-ROM, CD-I and DVD-ROM in this player! (CDGs play audio only, not graphics).
- It may not play CD-R, CD-RW and DVD-R, -RW, DVD+R, +RW in all cases due to the type of disc or condition of the recording.
- The recorded disc may not run as playback depends on the recording speed.
- Do not run the player with two discs loaded at the same time.

■ Disc Markings

	Play Region Number.
PAL	PAL colour system in Europe, Australia, New Zealand, etc.
NTSC	NTSC broadcast system in U.S.A, Canada, Korea, Japan, etc.
	Dolby Digital disc.
STEREO	Stereo disc.
DIGITAL SOUND	Digital Audio disc.
	DTS disc.
	Disc contains a Divx software product.

■ Play Region Number

Both the DVD-VCR and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not be played.

The Region Number for this player is described on the rear panel of the player.

Contents

Getting Started

Safety Instructions	2
Disc Type and Characteristics	3
Overviews	5
Front View of the DVD-VCR (DVD-V6700)	5
Rear View of the DVD-VCR (DVD-V6700)	6
Display Indicators	6
Accessories	7
Inserting Batteries in the Remote Control	7
Tour of the Remote Control	7

Connections

Connecting DVD-VCR to the TV using the RF Cable	9
Connecting DVD-VCR to the TV using the SCART Cable	9
Connecting DVD-VCR to a Satellite Receiver or Other Equipment	10
Connecting DVD-VCR to the TV using the Audio/Video Cable	10
Connecting DVD-VCR to the TV using the S-Video Cable (DVD Only)	11
Connecting DVD-VCR to the TV using the Component Video Cable (DVD Only)	11
AV Receiver Connections	12
Connecting an Audio/Video Input Cable	13
Plug & Auto Setup	13

Settings

Tuning Your Television for the DVD-VCR	15
Setting the Date and Time	15
Setting the Clock Automatically	16
Setting the Menu Language	16
Presetting the Stations Automatically	16
Presetting the Stations Manually	17
Clearing a Preset Station	18
Changing the Preset Station Table	19
Setting the VCR Output Channel	20

VCR Functions

Selecting the Colour Mode	21
NICAM	21
Intelligent Picture Control	22
Auto Power off	22
Screen Messages	23
Selecting the Cassette Type	23
Repeat Play	23
Selecting the Recording Speed	24
Protecting a Recorded Cassette	24
Recording a Programme Immediately	24
Recording a Programme with Automatic Stop	25

Recording from Another VCR or Camcorder	25
Using the Assemble Edit Function	26
Using the Timer Programming Feature	26
Checking a Preset Recording	27
Cancelling a Preset Recording	28

Playing Back

Playing a Cassette	29
Adjusting Picture Alignment Manually	29
Selecting the Audio Output Mode	29
Playing a Cassette in Slow Motion	29
Playing a Sequence Frame by Frame	30
Playing a Sequence at Variable Speeds	30
Searching for a Specific Sequence	30
Using the Tape Counter	32

DVD Functions


Setting Up the Language Features	33
Setting Up the Audio Options	34
Setting Up the Display Options	35
Setting Up the Parental Control	36
DivX(R) Registration	37
Firmware Upgrade	38
Special Playback Features	39
Using the Display Function	40
Adjusting the Aspect Ratio (EZ View)	41
Selecting the Subtitle Language	42
Selecting the Audio Language	43
Changing the Camera Angle	43
Zoom	43
Marks	44
Repeat Chapter/Title	44
A to B Repeat	45
MP3/WMA Play	46
Program & Random Play (CD/MP3/WMA)	47
Picture CD Playback	47
DivX/MPEG4 Playback	49
DivX/MPEG4 Special Playback Features	49

Reference

Technical Specifications	51
Troubleshooting Guide (VCR)	52
Troubleshooting Guide (DVD)	53


Overviews

■ Front View of the DVD-VCR (DVD-V6700)

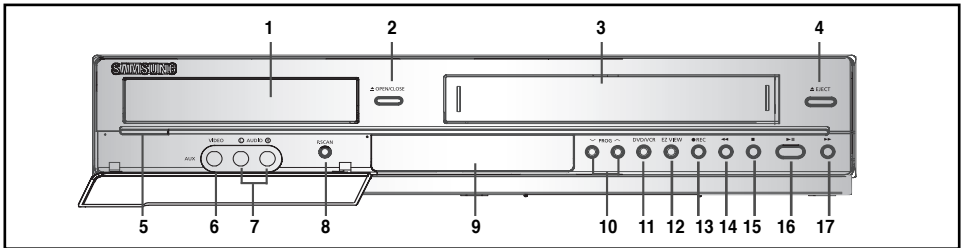


- | | |
|----------------------------------|------------------------------------|
| 1. DVD DECK. | 12. EZ VIEW BUTTON. |
| 2. OPEN/CLOSE BUTTON. | 13. RECORD BUTTON. |
| 3. VIDEO CASSETE COMPARTMENT. | 14. REWIND/SKIP BACK BUTTON. |
| 4. EJECT BUTTON. | 15. STOP BUTTON. |
| 5. STANDBY/ON BUTTON. | 16. PLAY/STILL BUTTON. |
| 6. AUX VIDEO INPUT JACK. | 17. FAST FORWARD/SKIP NEXT BUTTON. |
| 7. AUX AUDIO L/R INPUT JACK. | |
| 8. PROGRESSIVE SCAN MODE BUTTON. | |
| 9. FRONT PANEL DISPLAY. | |
| 10. PROGRAMME SELECTION BUTTON. | |
| 11. DVD/VCR SELECTION BUTTON. | |

Rear View of the DVD-VCR (DVD-V6700)

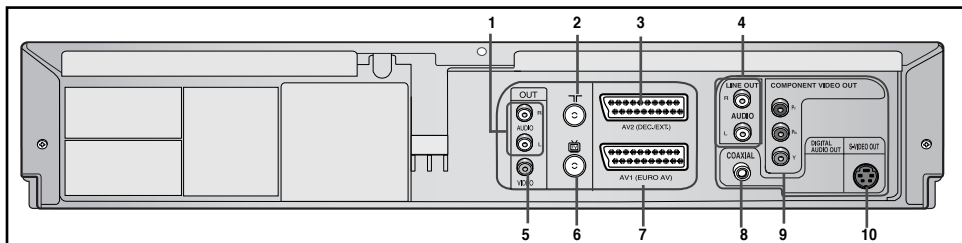

1. AUDIO L, R OUT JACKS.
2. AERIAL IN CONNECTOR.
3. AV2 (DEC./EXT.) IN/OUT SCART (EURO-21) JACK.
4. AUDIO L, R OUT JACKS (DVD only).
5. VIDEO OUT JACK.
6. OUT TO TV CONNECTOR.
7. AV1 (EURO AV) IN/OUT SCART. (EURO-21) JACK.
8. DIGITAL AUDIO OUT JACKS (COAXIAL).
9. COMPONENT VIDEO OUT JACKS.
10. S-VIDEO OUT JACK.


Display Indicators

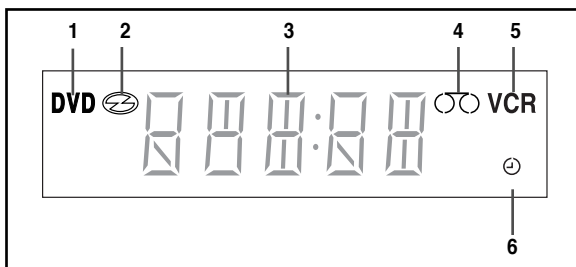

1. The DVD Deck is active.
2. Disc is loaded.
3. The time, counter position, current deck status is displayed.
4. VHS tape is inserted.
5. The VCR Deck is active.
6. A Timer Recording is programmed or in progress.

Accessories

Make sure that the following basic accessories are supplied with your DVD-VCR.

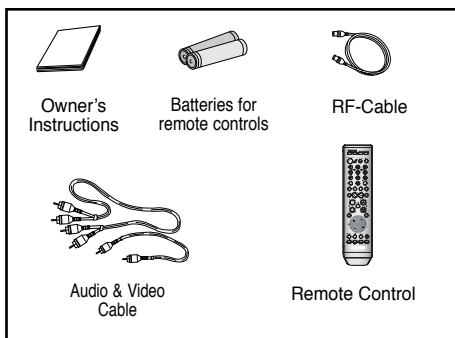


Inserting Batteries in the Remote Control

You must insert or replace the batteries in the remote control when you:

- Purchase the DVD-VCR
- Find that the remote control is no longer working correctly

- 1 To release the battery compartment cover, push the tab in the direction of the arrow and lift up.

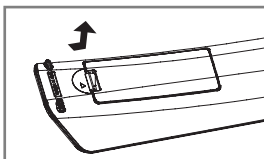


- 2 Insert two AAA, RO3 or equivalent batteries, taking care to respect the polarities:

- + on the battery with + on the remote control.
- – on the battery with – on the remote control.

Do not mix different battery types (manganese and alkaline for example).

- 3 Replace the cover by aligning it with the base of the remote control and push it down.

Tour of the Remote Control

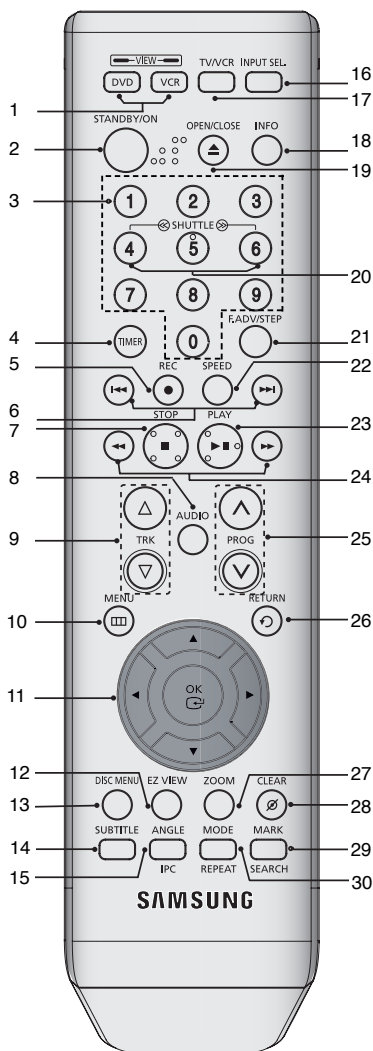

- 1. DVD/VCR**
Used to operate DVD, VCR.
- 2. STANDBY/ON**
Used to turn the power on or off.
- 3. Number buttons**
- 4. TIMER**
Used to activate the timer recording of a programme.
- 5. REC (●)**
Used to make a recording on cassette.
- 6. SKIP (I◀◀ / ▶▶ I)**
Use to skip a title, chapter or track.
- 7. STOP (■)**
Used to stop during playback.
- 8. AUDIO**
Used to access various audio functions.
- 9. TRK (△ / ▽)**
Used to adjust picture alignment manually to obtain the best possible picture during playback.
- 10. MENU**
Used to display the on-screen menu.
- 11. OK ▲ / ▼, ◀ / ▶**
Used to control the cursor in the on-screen menu and confirm your choice.
- 12. EZ VIEW**
Used to adjust the aspect ratio on a disc.
- 13. DISC MENU**
Used to display a disc menu.
- 14. SUBTITLE**
Used to change the DVD's subtitle language.
- 15. ANGLE**
Used to access various camera angles on a DVD.
IPC (Intelligent Picture Control).
Used to adjust the sharpness of the picture.
- 16. INPUT SEL.**
Used to select an external input signal.
- 17. TV/VCR**
Used to select TV or VCR.
- 18. INFO.**
Used to display the current setting or disc status.
- 19. OPEN/CLOSE**
Used to open and close the disc and video cassette tray.
- 20. SHUTTLE**
Used to play a sequence at variable speeds.
- 21. F.ADV/STEP**
Used to advance a sequence frame by frame.
- 22. SPEED**
Used to select the recording speed.
- 23. PLAY/PAUSE (► II)**
Used to play or pause during playback.
- 24. SEARCH (◀◀ / ▶▶)**
Used to search forward or backward through a disc.
- 25. PROG**
Used to select a TV programme.
- 26. RETURN**
Used to return to a previous menu.
- 27. ZOOM**
Used to enlarge picture .
- 28. CLEAR**
Used to clear a preset TV station.
Used to cancel a preset recording.
Used to cancel a preset mark.
Used to set the tape counter to zero.
Used to resume normal play during repeat play.
- 29. MARK**
Used to mark a position during playback a disc.
SEARCH
Used to search for a specific sequence.
- 30. MODE**
Used to select the programme or random play.
REPEAT
Used to allow the repeat play a title, chapter, track, disc or A-B.

Connections

 

Connecting DVD-VCR to the TV using the RF Cable


To receive television programmes a signal must be received from one of the following sources:

- An outdoor aerial.
- An indoor aerial.
- A cable television network.
- A satellite receiver.

Note

- Make sure that both the television and the DVD-VCR are switched off before connecting the cables.

- 1 Remove the aerial or network input cable from the television.
- 2 Connect this cable to the 75Ω coaxial jack marked  on the rear of your DVD-VCR.
- 3 Plug the RF Cable supplied into  the jack on your DVD-VCR.
- 4 Plug the other end of the RF Cable into the connector previously used for the aerial on the television.

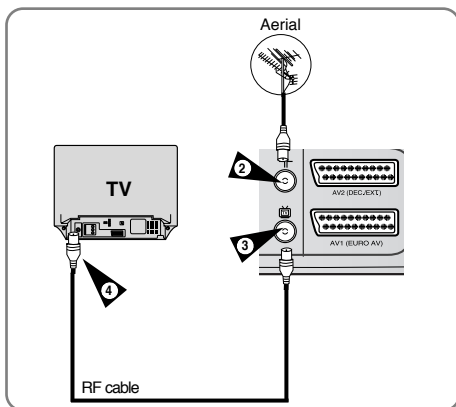

Connecting DVD-VCR to the TV using the SCART Cable

You can connect your DVD-VCR to the television using the SCART cable if the appropriate

input is available on the television. You thus:

- Obtain better quality sound and pictures.
- Simplify the setting up procedure of your DVD-VCR.

Note


- Regardless of the type of connection chosen, you must always connect the RF Cable supplied. Otherwise, no picture will be visible on the screen when the DVD-VCR is switched off.
- Make sure that both the television and the DVD-VCR are switched off before connecting the cables.

- 1 Connect the Aerial Cable.
- 2 Connect one end of the SCART cable to the AV1 (EURO AV) jack on the rear of the DVD-VCR.
- 3 Plug the other end into the appropriate connector on the television.

Connecting the Audio Output Cable

You can connect your DVD-VCR to a Hi-Fi system. Example: You wish to take advantage of the quality of your Hi-Fi stereo system when watching a disc play.

- 4 Plug the audio output cable into the audio connectors on the rear of your DVD-VCR.
- 5 Plug the other end of the audio cable into the appropriate input connectors on your Hi-Fi stereo system.

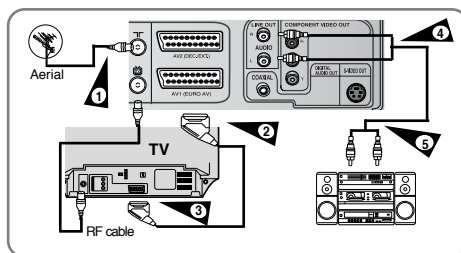

Note

- Please do not connect Scart and Component Video (Y, Pb, Pr) output simultaneously, as they may interfere and degrade both video output quality.

Connecting DVD-VCR to a Satellite Receiver or Other Equipment

You can connect your DVD-VCR to a Satellite receiver or other DVD-VCR using the SCART cable if the appropriate outputs are available on the equipment chosen. The following illustrations give a few examples of the connection possibilities.

1 AV2(EURO AV): By means of 21-pin Scart Cable

Plug the SCART Cable with satellite receiver or other equipment into the AV2 (EURO AV) jack on the rear of the DVD-VCR.


After making this connection, select the source by pressing the **INPUT SEL.** button for the **AV2** input sources.

2 By means of RF Cable

After making this connection, you must preset the station received through the satellite tuner.

3 AV1 (EURO AV) : By means of 21-pin Scart Cable

Connect the end of the SCART cable to the AV1(EURO AV) jack on the rear of the DVD-VCR. Plug the other end into the appropriate connector on the television.

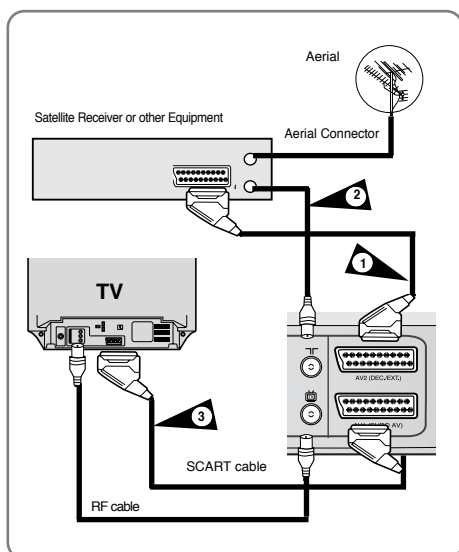

Connecting DVD-VCR to the TV using the Audio/Video Cable

You can connect your DVD-VCR to the television using the audio/video cable if the appropriate input is available on the television.


1 Connect one end of the video cable into the **VIDEO** output jack on the rear of the DVD-VCR.

2 Plug the other end of the video cable into the appropriate input connector on the television.

3 Connect one end of the audio cables supplied into the **AUDIO** output jacks on the rear of the DVD-VCR.

- Take care to respect the colour coding of the left and right channels.

4 Plug the other end of the audio cables into the appropriate input connectors on the television.

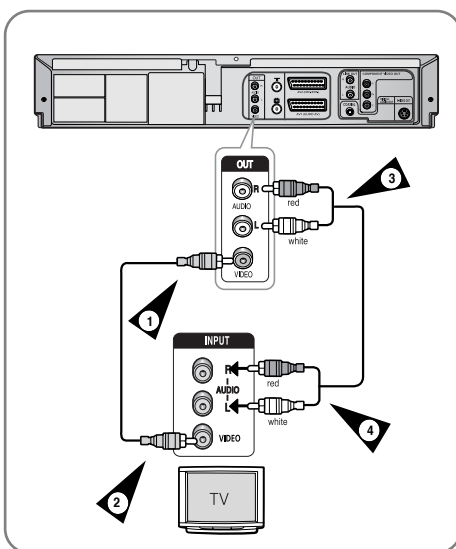


Connecting DVD-VCR to the TV using the S-Video Cable (DVD only)

You will enjoy high quality images. S-Video separates the picture element into black and white(Y) and colour(C) signals to present clearer images than regular video input mode.

- 1 Connect one end of the S-Video cable into the **S-VIDEO** output jack on the rear of the DVD-VCR.
- 2 Plug the other end of the S-Video cable into the appropriate input connector on the television.
- 3 Connect one end of the audio cables supplied into the **AUDIO LINE** output jacks on the rear of the DVD-VCR.
 - Take care to respect the colour coding of the left and right channels.
- 4 Plug the other end of the audio cables into the appropriate input connectors on the television.

Note


- Use the S-Video connection method only for the DVD.

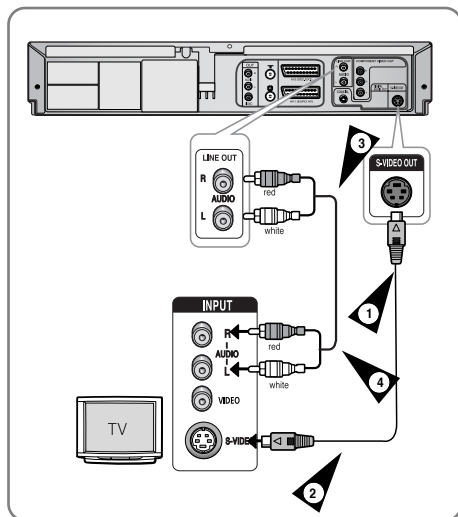

Connecting DVD-VCR to the TV using the Component Video Cable (DVD only)

Your TV must support progressive scan input to allow you to watch component video output. You will enjoy high quality accurate colour reproduction images. Component video separates the picture element into black and white (Y), blue (Pb), red (Pr) signals to present most clear and clean images.


- 1 Connect Component video cables between the **COMPONENT VIDEO OUT** jacks on the rear of the DVD-VCR and **COMPONENT VIDEO IN** jacks on the rear of the TV.
- 2 Connect audio cables between the **AUDIO LINE OUT** jacks on the rear of the DVD-VCR and **AUDIO IN** jacks on the rear of the TV.
 - Take care to respect the colour coding of the left and right channels.

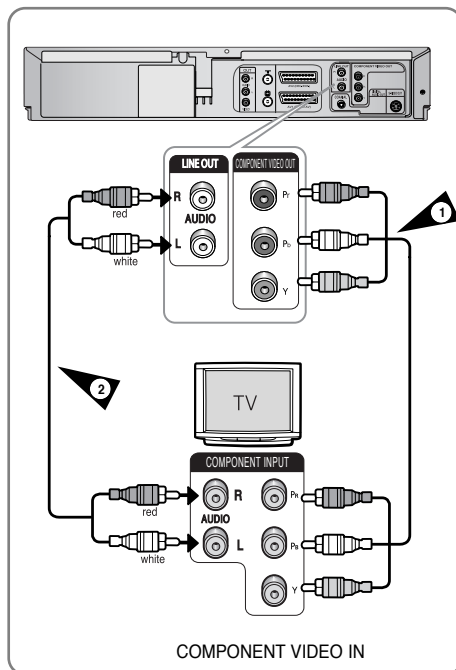

Progressive Scan (DVD only)

If the TV connected supports Progressive Scan, press the **P.SCAN** button on the front panel in stop mode.

- The message “Press OK to confirm Progressive scan mode. Otherwise press RETURN.” will be displayed. If you want Progressive scan mode, select OK. Make sure that the disc has stopped completely before changing the mode.

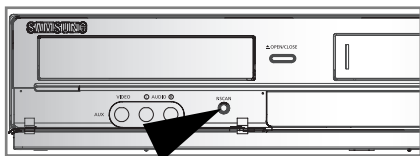

- To cancel the progressive scan mode, press the **P.SCAN** button in stop mode.


Note

- Do not press the **P.SCAN** button if you are using a TV that does not support Progressive mode. Nothing will be displayed on the screen if pressed. To release the Progressive mode, press the **P.SCAN** button in stop mode.
- See your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's instructions regarding Progressive Scan settings in the TV's menu system.
- Depending on your TV, the method of connection may differ from the illustration above.
- What is "Progressive Scan"? Progressive scan has twice as many scanning lines as the interlace output method has. Progressive scanning method can provide better and clearer picture quality.
- You must connect the player to the component(s) before using the Progressive Scan feature.
- Make sure that the colour coded connections match. That is, the Y, Pb and Pr component output jacks of your DVD -VCR should be connected to the exact corresponding component input jacks on your TV. Otherwise, red or blue images will be displayed on the TV screen.
- NTSC DVD disc is not supported.

AV Receiver Connections

To take full advantage of the movie theater experience that DVD offers, you may want to connect your DVD-VCR to a complete Surround Sound system, including an A/V Receiver and six Surround Sound speakers. If your A/V receiver is equipped with a Dolby Digital Decoder, you have the option to bypass the DVD-VCR's built-in Dolby Digital Decoder. Use the Digital Audio Out connection below.

- 1 Connect a Digital Audio coaxial cable from the Digital Audio Out jacks on the panel of the DVD-VCR to their corresponding Digital Audio Input jacks on your A/V Receiver:

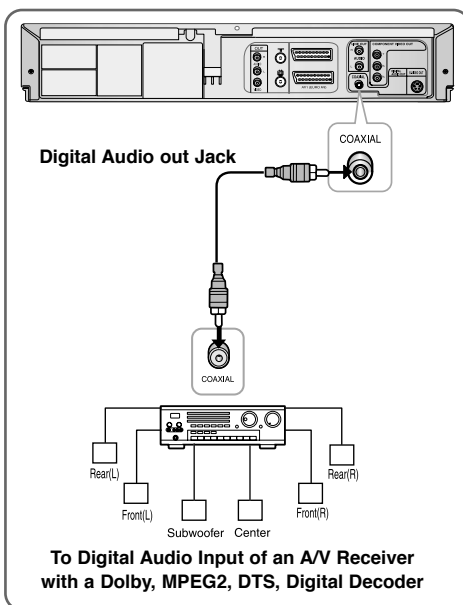

To Digital Audio Input of an A/V Receiver with a Dolby, MPEG2, DTS, Digital Decoder

Connecting an Audio/Video Input Cable

You can connect other audio/video equipment to your DVD-VCR using audio/video cables if the appropriate outputs are available on the equipment chosen.

Examples :

- You wish to copy a video cassette with the help of a second VCR.
- You wish to play and/or copy pictures taken with a camcorder.
- Make sure that both the external devices and the DVD-VCR are switched off before connecting the cables.


1 Connect one end of the video cable into the **VIDEO** input jack on the front of the DVD-VCR.

2 Plug the other end of the video cable into the appropriate output connector on the other system (VCR or Camcorder, etc).

3 Connect one end of the audio cable supplied into the **AUDIO** input jacks on the front of the DVD-VCR.

- Take care to respect the colour coding of the left and right channels.

4 Plug the other end of the audio cable into the appropriate output connectors on the other system (VCR, camcorder, etc).

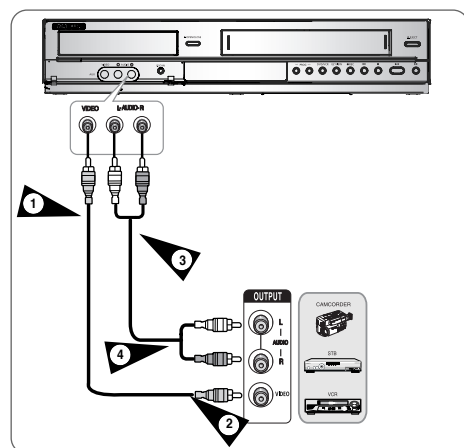

Plug & Auto Setup

Your DVD-VCR will automatically set itself up when it is plugged into the mains for the first time. TV stations will be stored in memory. The process takes a few minutes. Your DVD-VCR will then be ready for use.


1 Connect the RF Cable as indicated on page 9. (Connecting Your DVD-VCR to the TV using the RF Cable).

2 Plug the DVD-VCR into the mains.


- “AUTO” in the front panel display flickers.




3 The Language Set menu is displayed.

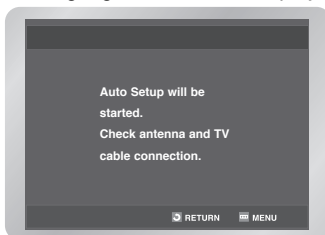

4 Press the **▲** or **▼** button to select the desired language, then press **OK** button. Start the auto setup.

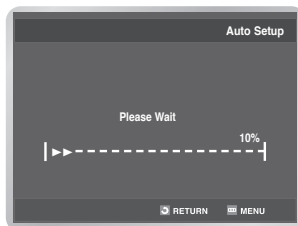

5 The current time and date are displayed automatically.

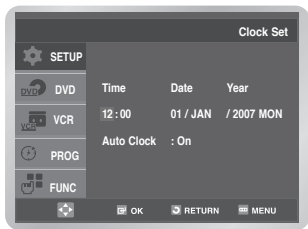

Check the Date and Time if it is :

- Incorrect, refer to “Setting the Date and Time”. (See page 15)
- Correct, press the **RETURN** button twice to exit the menu.

Note

- Now, you only have to switch the DVD-VCR on and it is ready for use.
- Function for “Plug & Auto Set Up” is fixed already. So if you want to change this fixed one, you can change. (refer to “Presetting the Stations Manually” page 17).

Settings

Tuning Your Television for the DVD-VCR

You must tune your television for the DVD-VCR only if you are using the RF cable.

To view pictures from your DVD-VCR when a Scart cable is used, the television must be set to the audio/video mode (AV).

- 1 Switch on the television.
- 2 Switch on the DVD-VCR by pressing the **⏻/I STANDBY/ON** on the front of the DVD-VCR or **STANDBY/ON** on the remote control.
- 3 Select a programme position on the television to be reserved for use with your DVD-VCR.
- 4 Insert the video cassette in the DVD-VCR. Check that the DVD-VCR starts reading the cassette; if not, press the **▶||** button.
- 5 Start a scan on your television or set the television to UHF channel 60.
- 6 Fine tune the television until the pictures and sound are obtained clearly.
- 7 When the picture and sound are perfectly clear, store this channel at the desired programme position on the television. That programme is now reserved for use with your DVD-VCR.

Setting the Date and Time


Your DVD-VCR contains a 24-hour clock and calendar used to:

- Automatically stop programme recording.
- Preset your DVD-VCR to record a programme automatically.


You must set the date and time when:

- You purchase the DVD-VCR.
- Do not forget to reset the time when you change clocks from winter to summer time and vice versa.

- 1 Press the **MENU** button, then press the **OK** or **▶** button.

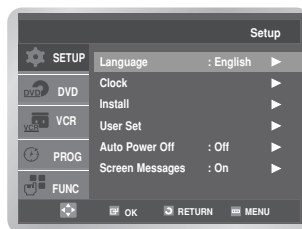


- 2 Press the **▲** or **▼** button to select **Clock**, then press the **OK** or **▶** button. The **Clock Set** menu is displayed.
- 3 Press the **◀** or **▶** button to select the hour, minutes, day, month, and year. The selected option is highlighted. Press the **▲** or **▼** button to set them. The day of the week is displayed automatically. Press the **OK** button.

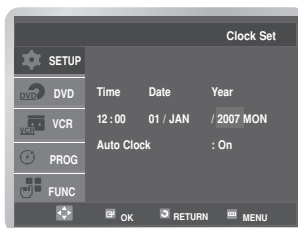

- You can hold down the **▲** or **▼** button to scroll more quickly through the values.
- Press the **MENU** button to exit the menu.

■ Setting the Clock Automatically

- 4 Press the ◀ or ▶ button to select **Auto Clock**. Press the ▲ or ▼ button to select **On**.

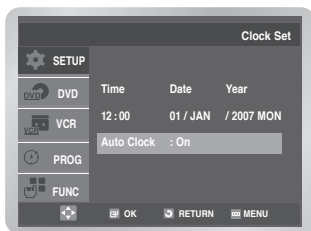


Setting the Menu Language

- 1 Press the **MENU** button, then press the **OK** or ▶ button.



- 2 Press the **OK** or ▶ button again. The **Language Set** menu is displayed.

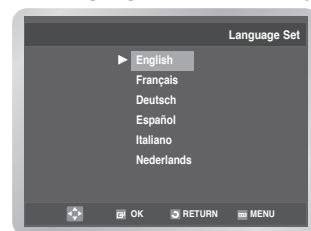

- 3 Press the ▲ or ▼ button to select desired language, then press the **OK** or ▶ button.
- Press the **MENU** button to exit the menu.


Presetting the Stations Automatically

You do not need to preset the stations if you have already set them automatically (refer to “Plug & Auto Set Up” on page 13). Your DVD-VCR contains a built-in tuner used to receive television broadcasts. You must preset the stations received through the tuner. This can be done:


- Plug & Auto Set up (refer to page 13).
- Automatically.
- Manually (refer to page 17).

You can store up to 80 stations.


- 1 Press the **MENU** button, then press the **OK** or ▶ button.

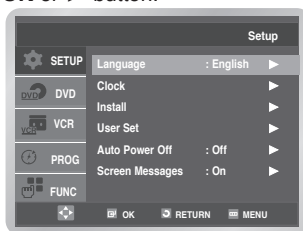


- 2 Press the ▲ or ▼ button to select **Install**, then press the **OK** or ▶ button. The **Install** menu is displayed.

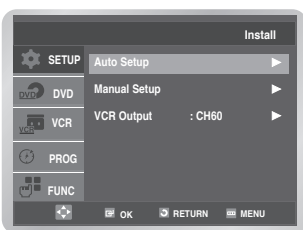

- 3 Press the **OK** button. A message is displayed, indicating that any channels already preset on your DVD-VCR will be deleted.

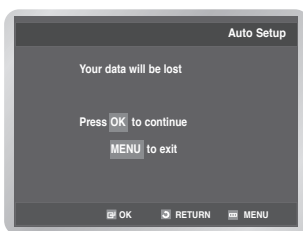

- 4 Press the **OK** button to start the auto scanning. The message **Please Wait** is displayed.

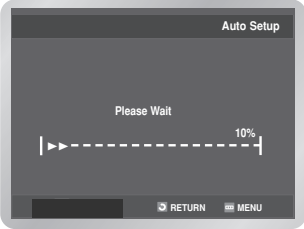

- The first frequency band is scanned and stored, then the DVD-VCR searches for the second station and so on. When the automatic scanning procedure has finished, the DVD-VCR switches automatically to programme 1.
- If you wish to cancel the auto scanning before the end, press the **MENU** button.


Note

- The number of stations automatically stored by the DVD-VCR depends on the number of stations that it has found.
- The time and date are set automatically from the broadcast signal. If the signal is weak or ghosting occurs, the time and date may not be set automatically. In this case, they should be set manually (refer to page 15).
- Once the auto scanning procedure has finished, some stations may have been stored more than once; select the stations with the best reception and delete the ones no longer required (refer to page 18).


Presetting the Stations Manually

You do not need to preset the stations manually if you have already set them automatically.

- 1 Press the **MENU** button, then press the **OK** or **▶** button.

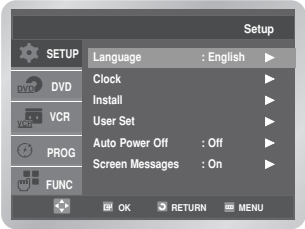


- 2 Press the **▲** or **▼** button to select **Install**, then press the **OK** or **▶** button. The **Install** menu is displayed.

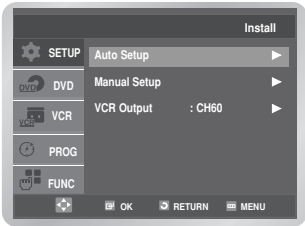


- 3 Press the **▲** or **▼** button to select **Manual Setup**, then press the **OK** or **▶** button. The **TV STATION TABLE** menu is displayed.

- 4 Press the **▲** or **▼** button to select the required programme number.

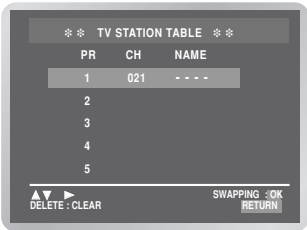

- 5 Press the **▶** button to preset the station. The **MANUAL TUNING** menu will be displayed. Press the **◀** or **▶** button to start scanning the channels. The frequency band is scanned and the first station found is displayed.

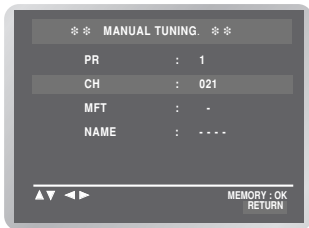

6 If necessary, press the ▲ or ▼ button to select **MFT**, then press the ◀ or ▶ button to adjust the picture.

7 Press the ▲ or ▼ button to select **NAME**. The station name is set automatically from the broadcast signal.

- To change the programme's name, press the ▶ button. The first letter of the name flashes.

To...	Then...
Select a character in the name.	Press the ▲ or ▼ button until the required character is displayed (letters, numbers or "-" character).
Move to the next previous or character	Press the ◀ or ▶ button respectively.

8 If you...	Then...
Wish to store the station displayed	<ul style="list-style-type: none"> Press OK to store the station.
Do not wish to store the station displayed	<ul style="list-style-type: none"> Press the ▲ or ▼ button until the CH is selected. Press the ◀ or ▶ button to go on scanning the frequency band and display the next station.

9 Repeat this procedure from step 4 onwards, until all the required stations have been stored.


10 Press the **MENU** button to exit the menu.

Clearing a Preset Station

If you have stored a TV station:


- That you do not require
- At the wrong programme position, you can cancel it.

1 Press the **MENU** button, then press the **OK** or ▶ button.

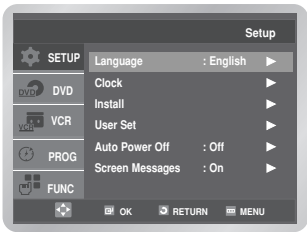

2 Press the ▲ or ▼ button to select **Install**, then press the **OK** or ▶ button. The **Install** menu is displayed.

3 Press the ▲ or ▼ button to select **Manual Setup**, then press the **OK** or ▶ button. The **TV STATION TABLE** menu is displayed.

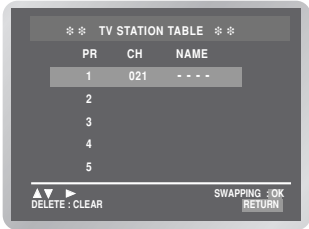


4 Press the ▲ or ▼ button to select required preset TV station. Press the **CLEAR** button to delete.

5 Repeat the same procedure from step 4 onwards until all the required stations have been cleared.


Changing the Preset Station Table

You can rearrange the station table and give different programme numbers to the stations listed according to your own preferences.

- 1 Press the **MENU** button, then press the **OK** or **▶** button.

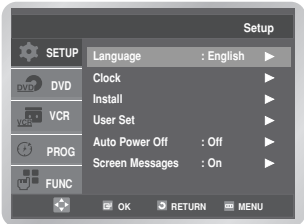


- 2 Press the **▲** or **▼** button to select **Install**, then press the **OK** or **▶** button. The **Install** menu is displayed.

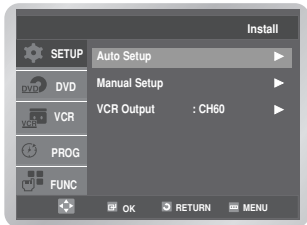


- 3 Press the **▲** or **▼** button to Select **Manual Setup**, then press the **OK** or **▶** button. The **TV STATION TABLE** menu is displayed.

- 4 Press the **▲** or **▼** button to select required preset TV station. The selected station is displayed at the same time on the television screen.

- 5 Press the **OK** button to change the programme number assigned to a station.

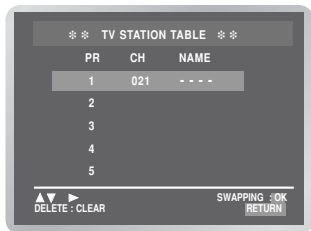

- 6 Press the **▲** or **▼** button to select required position, then press the **OK** button to swap the position.
For example to move a TV station in programme 1 to programme 3.

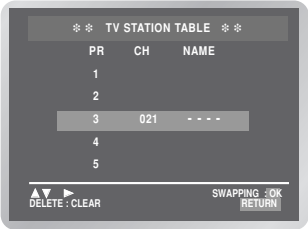


- Press the **MENU** button to exit the menu.

Setting the VCR Output Channel


Your DVD-VCR output channel may need to be changed if the pictures suffer from interference or if your TV cannot find the pictures.

- 1 Press the **MENU** button, then press the **OK** or ► button.

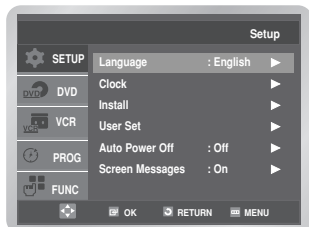

- 2 Press the ▲ or ▼ button to select **Install**, then press the **OK** or ► button. The **Install** menu is displayed.

- 3 Press the ▲ or ▼ button to select **VCR Output CH**.

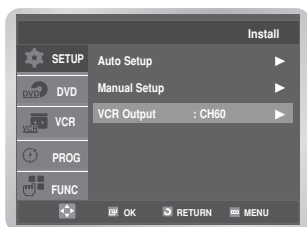

- 4 Press the **OK** or ◀ or ▶ button to select the required output channel (CH21~CH69).

→ CH21 → ..CH60 → ..CH69 →

- Press the **MENU** button to exit the menu. Then tune your television again (see page 15).
- You can select the required output channel directly by using the number button.


VCR Functions

Selecting the Colour Mode


Before recording or playing back a cassette, you can select the required system standard. Otherwise, the system automatically selects the reception standard when you select AUTO.

- When playing back a cassette, the standard is automatically selected by the DVD-VCR.
- When you playback an NTSC-recorded tape on this DVD-VCR make a setting on the colour system according to your TV. If your TV is a PAL system only TV, set NTPB. If your TV is multi system TV (NTSC 4.43 compatible), set NT4.43 and you can record NT4.43.

- 1 Press the **MENU** button, then press the **OK** or **▶** button.

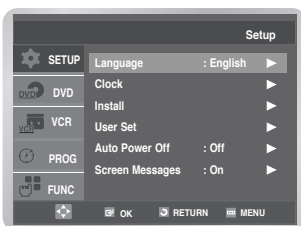

- 2 Press the **▲** or **▼** button to select **User Set**, then press the **OK** or **▶** button. The **User Set** menu is displayed.

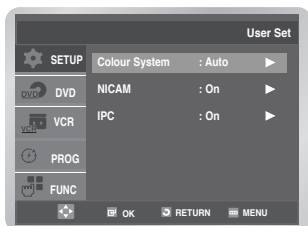

- 3 Press the **OK** or **▶** button to select required colour system. **Auto** → **PAL** → **B/W**
 - **Auto**: When playing back a cassette, the system standard is automatically selected by the DVD-VCR.
 - **B/W**: Black and White.


NICAM

NICAM programmes are divided into 3 types.

NICAM Stereo, NICAM Mono and Bilingual (transmission in another language).


NICAM programmes are always accompanied by a standard mono sound broadcast and you can select the desired sound. Please refer to page 29.

- 1 Press the **MENU** button, then press the **OK** or **▶** button.

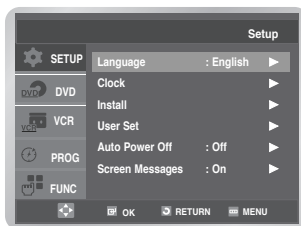

- 2 Press the **▲** or **▼** button to select **User Set**, then Press the **OK** or **▶** button.

The **User Set** menu is displayed.

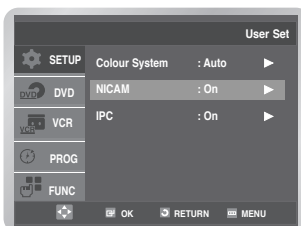

- 3 Press the **▲** or **▼** button to select **NICAM**, then press the **OK** or **▶** button to select **On** or **Off**.

- **On** (for NICAM mode):

Normally set at this position


- **Off** (for MONO mode):

Only set at this position to record the standard mono sound during a NICAM broadcast if the stereo sound is distorted due to inferior reception conditions.

Intelligent Picture Control


This feature allows you to adjust the sharpness of the image automatically, according to your own preferences.

- 1 During playback, press the **MENU** button, then press the **OK** or **▶** button.
- 2 Press the **▲** or **▼** button to select **User Set**, then press the **OK** or **▶** button. The **User Set** menu is displayed.
- 3 Press the **▲** or **▼** button to select **IPC** (Intelligent Picture Control), then press the **OK** or **▶** button.

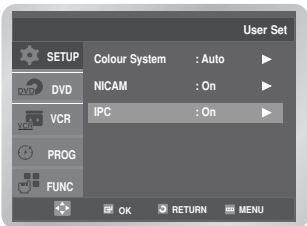

- You can select the modes simply by pressing the **IPC** button.


- 4 To adjust the sharpness manually, press the **▼** button to turn the IPC mode **OFF**. The sharpness of the picture is adjusted manually. Press the **◀** or **▶** buttons until the picture is displayed according to your preferences.

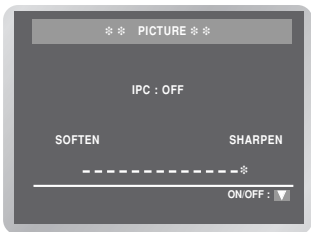


Auto Power Off

This feature automatically turns off your DVD-VCR if no signal is received and you do not press any button for the selected time.

- 1 Press the **MENU** button, press the **OK** or **▶** button.

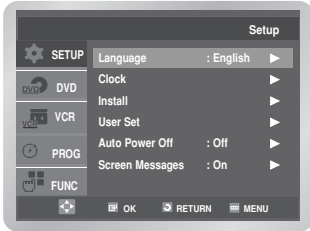

- 2 Press the **▲** or **▼** button to select **Auto Power Off**.

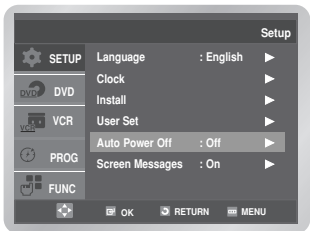

- 3 Press the **OK** or **▶** button to select the preset interval.

→ **Off** → **1 Hour** → **2 Hour** → **3 Hour**


- Press the **MENU** button to exit the menu.

Screen Messages


Your DVD-VCR displays most information both the DVD-VCR and the television.

You can choose to display or hide this information on the television screen (If you configure the Screen Message to Off, the Fast Forward and Rewind messages will not be displayed on the screen. However, the Search Message will not be displayed on the screen regardless of the Screen Message configuration).

- 1 Press the **MENU** button, then press the **OK** or **▶** button.

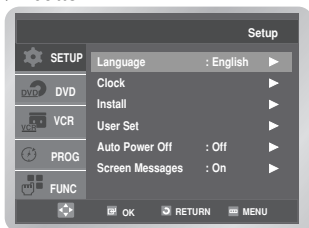

- 2 Press the **▲** or **▼** button to select **Screen Messages**.

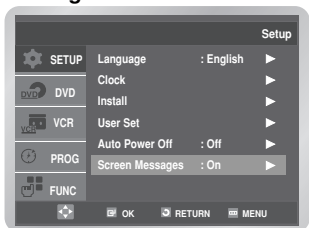


- 3 Press the **OK** or **▶** button to select **On** or **Off**.
 - **On** : Select to display on-screen information.
 - **Off** : Select to hide on-screen information.
 - Press the **MENU** button to exit the menu.

Selecting the Cassette Type

If you wish to use the tape counter to display the time remaining on a cassette, you must indicate the type of cassette inserted.

- 1 Press the **MENU** button, then press the **▲** or **▼** button to select **VCR**.
- 2 Press the **OK** or **▶** button.
The **Tape Select** is highlighted.

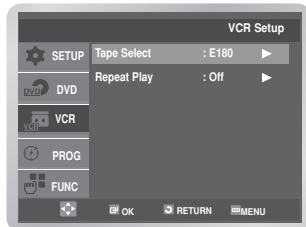

- 3 Press the **OK** or **▶** button to select the correct cassette length.


→ **E180** → **E240** → **E260** → **E300**

- Press the **MENU** button to exit the menu.

Repeat Play

You can set repeat play to repeat the tape continuously from beginning to end.

- 1 Press the **MENU** button, then press the **▲** or **▼** button to select **VCR**.
- 2 Press the **OK** or **▶** button, then press the **▲** or **▼** button to select **Repeat Play**.
Press the **OK** or **▶** button to select **On** or **Off**.

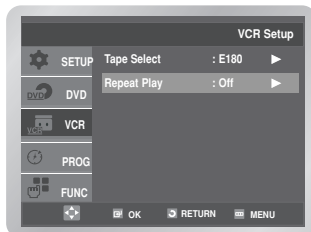

- **On**: Repeat play.
- **Off**: Do not wish to repeat play.

Selecting the Recording Speed

You can record a cassette at two different speeds:

- SP (Standard Play)
- LP (Long Play)

In Long Play modes:

- Each cassette lasts twice as long
- The recording is of a slightly lower quality

- 1 Press the **SPEED** button to select **SP** or **LP**.
 - The selected record speed will appear on the front panel display.




Type	Recording Time (in SP)
E180	180 mins. or 3 hours
E240	240 mins. or 4 hours
E260	260 mins. or 4 hours and 20 mins.
E300	300 mins. or 5 hours

Protecting a Recorded Cassette

Video cassettes have a safety tab to prevent accidental erasure. When this tab has been removed, you cannot record on the tape.

 - 1 If you wish to protect a cassette, break off the tab using a small screwdriver.



- 2 To re-record over a protected cassette (safety tab broken), cover the hole with adhesive tape.

Recording a Programme Immediately

Before recording a programme, you must have preset the corresponding station (unless you are recording via an external video source). If you have not done so, refer to pages 16~17.

- 1 Switch on the television.
- 2 Insert the video tape in to the VCR deck, with the window visible and the safety tab intact or the opening covered with adhesive tape. The DVD-VCR is switched on automatically.
- 3 Select the station by pressing the **PROG** (Λ or V) button or select the source (AV1, AV2 or AUX) by pressing the **INPUT SEL.** button for a satellite tuner or external video source. The station number is displayed and the programme can be seen on the television.
- 4 Select the recording speed by pressing the **SPEED** button as many times as required.

- 5 Hold down the **REC** (●) button for a while to start recording.


The record indicator appears on the television and DVD-VCR display. An index is recorded on the tape (Refer to page 30).

- 6 To stop recording, press the ■ button once.
 - If your DVD-VCR ejects the cassette when you start recording, check to make sure that the cassette's safety tab is intact or that the opening (Created by a broken safety tab) is overed with adhesive tape.
 - If you reach the end of the tape while recording, the cassette rewinds automatically.

Recording a Programme with Automatic Stop

This function enables you to record up to nine hours (LP) of programmes. Your DVD-VCR stops automatically after the requested length of time.

- 1 Switch on the television.
- 2 Insert the cassette on which the programme is to be recorded, with the window visible and the safety tab intact or the opening covered with adhesive tape. The DVD-VCR is switched on automatically.
- 3 Select the station to be recorded by pressing the **PROG**(\wedge or \vee) button or select the source (AV1, AV2 or AUX) by pressing the **INPUT SEL.** button for a satellite tuner or external video source. The station number is displayed and the programme can be seen on the television.
- 4 Select the recording speed by pressing the **SPEED** button as many times as required (Refer to page 24).
- 5 Hold down the **REC** (●) button for a while to start recording. The record indicator appears on the television screen and DVD-VCR display. An index is recorded on the tape (Refer to page 30).
- 6 Press the **REC** (●) button several times to increase the recording time in:
 - 30-minute intervals up to four hours.
 - 1-hour intervals up to nine hours.The length is displayed on the television displays. The selected programme is recorded for the length of time requested. At the end of that time, the DVD-VCR stops recording automatically and power off.



LENGTH 2:30
SET LENGTH :
PRESS REC ●

- 7 If you wish to cancel the recording before the end, press the **STANDBY/ON** button.
 - If the end of the tape is reached while recording, the recording stops and power off.

Recording from Another VCR or Camcorder

You can copy a cassette to your DVD-VCR from another video source, such as another VCR or a Camcorder etc.

- It is an infringement of copyright laws to copy prerecorded cassettes or to re-record them in any form without the permission of the owners of the corresponding copyright.
- 1 Connect the output jack of your external devices to the SCART input connector or AUX on the front or rear of the DVD-VCR.
 - 2 Insert a blank cassette in your DVD-VCR.
 - 3 Insert the pre-recorded cassette in the other video source (VCR or Camcorder etc).
 - 4 Press the **INPUT SEL.** button to select the appropriate input on your DVD-VCR:
 - AV1, AV2 for the SCART input.
 - AUX for the RCA input.
 - 5 Start playing back the cassette to be copied.
 - 6 Hold down the **REC** (●) button for a while to start recording on your DVD-VCR.
 - 7 When you have finished recording, press the **■** button on both VCR and DVD-VCR.
 - If you wish to view the cassette being copied, your DVD-VCR must be connected as usual to the television (Refer to page 9 for further details).

Using the Assemble Edit Function

This function allows you to start a new recording at a specific position on the cassette while maintaining a very smooth scene change.


- 1 Insert the cassette to be edited in your DVD-VCR.
- 2 Press the ►II button to start playback.
- 3 When you reach the position from which you wish to start the new recording, press the ►II button.
- 4 Press the **F.ADV/STEP** button as often as necessary to advance frame by frame, until the exact recording position is located.
- 5 While the DVD-VCR is in still mode, hold down the **REC** (●) button for a while to activate the assemble edit function. The mode is changed to pause.
- 6 Select the source from which you wish to record by pressing:
 - The **PROG** ▲ or ▼ button for television channels.
 - The **INPUT SEL.** button for the AV1, AV2 or AUX.
- 7 Press the ►II button to start recording. If you want to finish the recording, press the ■ button.

Using The Timer Programming Feature


The Timer Programming feature allows you to preset the DVD-VCR to record a programme up to one month before that programme is to be broadcast. Up to six programmes can be preset.

- Before presetting a recording, check that the Date and Time are correct.
- You must check that the cassette tape is loaded.

- 1 Press the **MENU** button, then press the ▲ or ▼ button to select **PROG.**

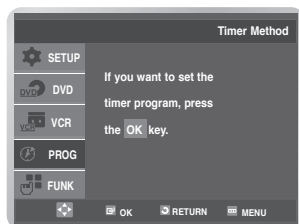


- 2 Press the **OK** or ► button. The timer programming menu is displayed.
- 3 Press the **OK** or ► button to select **PR**, then press the ▲ or ▼ button to select the required station.
 - Press the **INPUT SEL.** button to select an input source (AV1, AV2 or AUX) other than the tuner.
- 4 Press the ► button to select **Day**, then press the ▲ or ▼ button to select the required day.

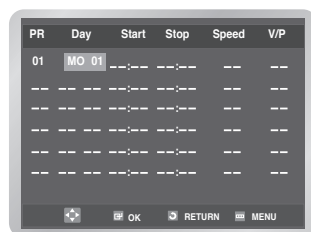

- **DLY** : Daily
- **W-SU** : Weekly Sunday
- **W-MO** : Weekly Monday
- ⋮
- **W-SA** : Weekly Saturday
- **MO 01** : Monday 01


5 Press the **►** button to select **Start** (Start time of recording).

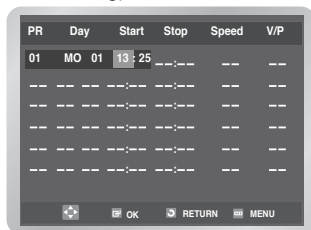

6 Press the **►** button to select **Stop** (Recording stop time).

- Press the **◀** or **►** button to select the hour or minute.
- Press the **▲** or **▼** button to set the stop time.

7 Press the **►** button to select **Speed** (Recording speed).

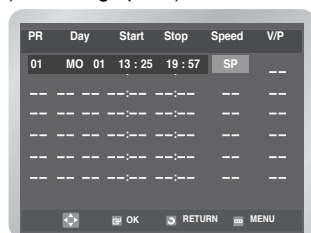

- Press the **▲** or **▼** button to select the required recording speed.
- **Auto** → **SP** (Standard Play) → **LP** (Long Play)
- **Auto Tape Speed Select**

The DVD-VCR's "Auto Tape Speed Select" function compares the duration of the timer recording to the actual recording time remaining on the tape loaded. If there is insufficient tape to complete a timer recording in **Auto** mode, the DVD-VCR automatically switches to **LP** mode to record the whole programme.

8 Press the **►** button to select **V/P** (VPS/PDC).

- Press the **▲** or **▼** button to select **On** or **Off**.

9 When you have finished, press the **OK** button to set the Timer Programming.

10 Press the **MENU** button to exit the menu.

11 Press the **STANDBY/ON** button to activate the timer.



Before starting recording, the DVD-VCR compares the timer duration with the remaining time on the cassette.


Checking a Preset Recording

You can check your preset recordings:


- When you have finished presetting the DVD-VCR
- If you have forgotten which programmes will be recorded.

1 Press the **MENU** button, then press the **▲** or **▼** button to select **PROG**.

The **Timer Method** menu is displayed.

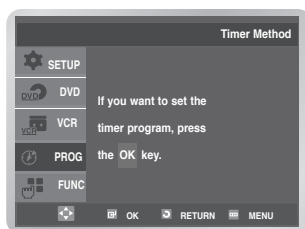

2 Press the **OK** or **►** button. The list of preset recordings is displayed with the corresponding information.

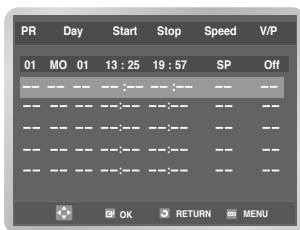

- It can be displayed simply by pressing the **TIMER** button on the remote control.


- 3** To change any values, select the required programme by pressing the ▲ or ▼ button, then change any values as required. For more details refer to page 26. (Step 2 to 9).
- Press the **MENU** button to exit the menu.
-

Cancelling a Preset Recording

You can cancel any programmes that are:


- Incorrect
 - No longer required
-

- 1** Press the **MENU** button, then press the ▲ or ▼ button to select **PROG** . The **Timer Method** menu is displayed.

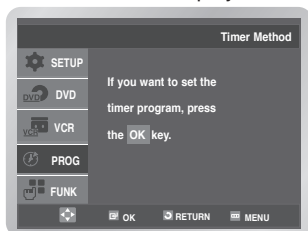

- 2** Press the **OK** or ► button. The list of preset recordings is displayed with the corresponding information.
- It can be displayed simply by pressing the **TIMER** button on the remote control.
-

- 3** Press the ▲ or ▼ button to select the programme to be cancelled, then press the **CLEAR** button .

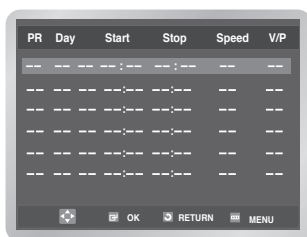

- All the recording information is deleted and broadcast will not be recorded.
 - Press the **MENU** button to exit the menu.
-

Playing Back

Playing a Cassette

This function allows you to play any pre-recorded cassette.

- 1 Switch on both the television and your DVD-VCR.
- 2 If the safety tab on the cassette is removed, the cassette is played automatically.
 - When a cassette is loaded, the tape position is optimized automatically to reduce disturbance (Digital Auto Tracking).
 - When playing a cassette, if the end of the tape is reached, the cassette is rewound automatically. NTSC tapes can be played back but cannot be recorded with this DVD-VCR.
- 3 Press the **■** (stop) button to stop the playback.
Press the **▲** (eject) button to eject the playback.

Adjusting Picture Alignment Manually

This feature allows you to adjust the alignment manually to obtain the best possible picture. When noise bars or streaks appear during playback, adjust alignment manually by pressing the **TRK** (**△** or **▽**) button until the picture is clear and stable.

- The tracking bar appears.
- The image is adjusted.

Selecting the Audio Output Mode

You can select the mode in which the sound is reproduced on the loudspeakers and AV outputs. The following options are available.

Press the **AUDIO** button on the remote control until the required option is displayed.

→ L → R → MIX → MONO → L R →

Option	Description
L	Used to listen to the sound on the left Hi-Fi channel.
R	Used to listen to the sound on the right Hi-Fi channel.
MIX	Used to listen to the mixed sound of the Hi-Fi and normal channels.
MONO	Used to listen to the sound on the normal mono channel.
L R	Used to listen to Hi-Fi stereo sound on the left and right channels. <ul style="list-style-type: none">• When playing back tapes recorded in Hi-Fi, the sound switches to Hi-Fi after five seconds of Mono.

Playing a Cassette in Slow Motion

You can play a cassette in slow motion.

- No sound is heard when playing back a cassette in slow motion.

- 1 Press the :
 - **▶II** button to start playing the cassette.
 - **▶II** button again to make still mode.
 - **▶▶** button to start slow mode.
 - **◀◀** or **▶▶** button as many times as required to decrease or increase the speed respectively.
 - **▶II** button twice to return to the normal speed.
 - The slow motion feature does not support running video backwards.
- 2 When playing back in slow motion, picture interference may occur.
Press the **TRK** (**△** or **▽**) button to minimize this effect.
 - When you have been using the Slow Motion function for more than about two minutes, the DVD-VCR will automatically play to protect the:
 - Cassette.
 - Video heads.

Playing a Sequence Frame by Frame

You can

- Stop the cassette at a given frame (image)
- Advance one frame at a time

No sound is heard when playing back frame by frame.

1 Press the :

- ►II button to start playing the cassette.
- ►II button again to make still mode.
- F.ADV button to advance frame by frame.
- ►II button to return to normal playback.
- Vertical stability: When playing back frame by frame, interference may be seen on the screen. Press the **TRK** (△ or ▽) button to minimize this effect.

Playing a Sequence at Variable Speeds

You can vary the playback speed using the Shuttle function (up to nine times the normal speed). Example: You wish to analyse a sports person's technique, movement by movement.

- No sound is heard when playing a sequence at variable speeds.

1 Press the :

- ►II button to start playing the cassette.
- **SHUTTLE** (<<) button to play the cassette backwards.
- **SHUTTLE** (>>) button to play the cassette forwards.

2 Each time you press the **SHUTTLE** button, the speed is changed as shown in the following illustration.

REVERSE PLAY X9	REVERSE PLAY X5	REVERSE PLAY X3	STILL	SLOW MOTION X1/10	SLOW MOTION X1/5	PLAY X3	PLAY X5	PLAY X9
-----------------------	-----------------------	-----------------------	-------	-------------------------	------------------------	------------	------------	------------

Searching for a Specific Sequence

Each time you record a cassette on this DVD-VCR, an "index" is automatically marked on the tape when recording starts. The Search function allows you to fast-forward or rewind to a specific index and start playback from that point. Depending on the direction selected, the indexes are numbered as follows:

↓

etc.	Prev Seq.	Seq. being played	Next Seq.	etc.
2	1	1	2	


- This DVD-VCR uses a standard indexing system (VISS). As a result, it will recognize any indexes marked by other VCRs using the same system and vice versa.

Go To [0:00:00] Stop

Use this feature when you want to search for the 0:00:00 counter position on a cassette. Press the **CLEAR** button at the point on the tape where you want to set the counter to 0:00:00. The VCR will rewind or fast forward, searching for the 0:00:00 counter position, and then automatically stop at that position.

1 Press the **MENU** button, then press the ▲ or ▼ button to select **FUNC**. The **Function** menu is displayed. Press the **OK** or ► button.

2 Press the ▲ or ▼ button to select **VCR Function**, then press the **OK** or ► button. The **VCR Function** menu is displayed with the **Go To [0:00:00]** selected.

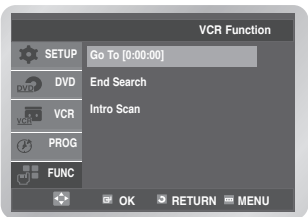


- It can be displayed simply by pressing the **SEARCH** button.

3 Press the **OK** or ► button again.

■ End Search

Use this feature when you want to search for a blank position to record a program on a cassette. The VCR will fast forward, searching for a blank position, and then automatically stop at that position. If the VCR reaches the end of the tape during end search, the tape will be ejected.


- 1 Press the **SEARCH** button. The **VCR Function** menu is displayed. Press the **▲** or **▼** button to select **End Search**.

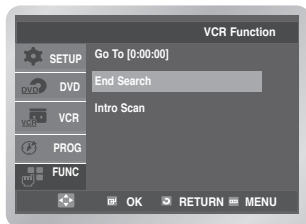

- 2 Press the **OK** or **▶** button.

■ Intro Scan

- 1 Press the **SEARCH** button. The **VCR Function** menu is displayed. Press the **▲** or **▼** button to select **Intro Scan**.

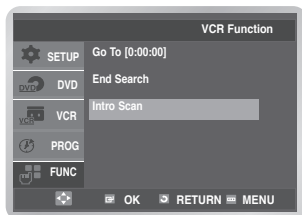

- 2 Press the **OK** or **▶** button.

- 3 Press the **◀◀** or **▶▶** button depending on the direction where your desired programme is located.

INTRO SCAN : ◀◀ ▶▶

- 4 When an Index mark is found the DVD-VCR will playback the tape for 5 seconds, after which it will continue searching for the next Index mark


INTRO SCAN : ◀◀

- 5 If you want to watch the tape from a particular Index, press the **▶||** button twice.

■ Index Skip Search

This feature will enable you to fast forward/rewind to a specific point on a tape: e.g. If you have recorded 3 different programmes on a tape and you have rewound the tape to the beginning, by using this feature you can go directly to the start of programme 2 simply by pressing the **SEARCH** button.

- 1 Press the **SEARCH** button. The **VCR Function** menu is displayed. Press the **▲** or **▼** button to select **Intro Scan**.

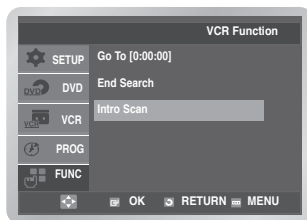

- 2 Press the **OK** or **▶** button.

- 3 Press the **◀◀** or **▶▶** button twice more.

- 4 These Index searches can be made forwards (press the **▶▶** button) or backwards (press the **◀◀** button).
(◀◀ -20 • • 0 • • +20 ▶▶)
This will take you directly to the start of the desired programme is located.

INDEX SEARCH : ◀◀ -06

To cancel an Index search simply press the **▶||** or **■** button.

Using the Tape Counter

The tape counter:

- Indicates the elapsed time in the play and record modes (Hours, Minutes and Seconds).
- Is reset when a cassette is inserted in the DVD-VCR.
- Allows you to find the beginning of a sequence easily.
- If the remaining time is to be calculated correctly, you must indicate the type of cassette being used.

-
- 1** Insert a cassette in your DVD-VCR.
To set the tape counter to zero at the beginning of a sequence:



- Press the **INFO** button twice to display the counter.
- Press the **CLEAR** button when you want to set the tape counter to zero.

-
- 2** When you are ready,
- Start Playback or Recording.
 - Press the **■** button.
 - To fast-forward or rewind to the sequence at which the counter was set to zero, press the **◀◀** or **▶▶** button.
 - Some DVD-VCR information, such as the counter, can be displayed on the television screen (Unless you have deactivated the **Screen Messages** mode; refer to page 23).

Press the **INFO** button:

- Once to display the current function, programme number, recording speed, time and counter.
 - Twice to display the counter only.
 - Three times to display the time remaining on the cassette.
 - Four times to clear the display.
-


DVD Functions

Setting Up the Language Features


If you set disc menu, audio and subtitle language in advance, it will come up automatically every time you watch a movie.

Using the Disc Menu Language


- 1 Press the **MENU** button in the stop mode.
Press the **▲** or **▼** button to select **DVD**, then press the **OK** or **▶** button.

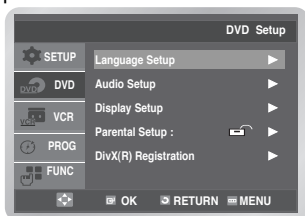

- 2 Press the **OK** or **▶** button again.
Press the **▲** or **▼** button to select **Disc Menu**, then press the **OK** or **▶** button.

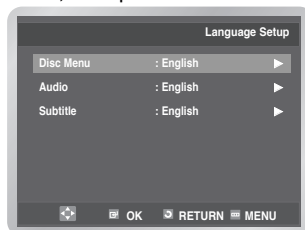

- 3 Press the **▲** or **▼** button to select the required language.

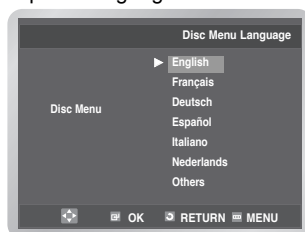


- Select **Others** if the language you want is not listed.

Using the Audio Language


- 1 Press the **MENU** button in the stop mode.
Press the **▲** or **▼** button to select **DVD**, then press the **OK** or **▶** button.



- 2 Press the **OK** or **▶** button again.
Press the **▲** or **▼** button to select **Audio**, then press the **OK** or **▶** button.

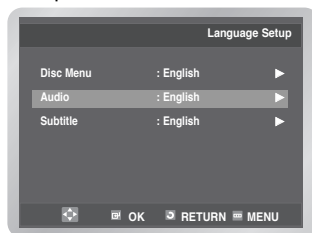

- 3 Press the **▲** or **▼** button to select the required language.

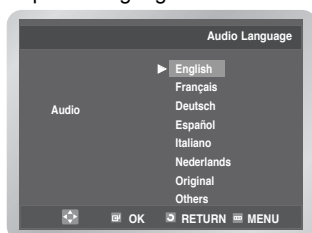


- Select **Original** if you want the default soundtrack language to be the original language the disc is recorded in.
- Select **Others** if the language you want is not listed.


- 4 Press the **OK** button.

■ Using the Subtitle Language


- 1 Press the **MENU** button in the stop mode. Press the **▲** or **▼** button to select **DVD**, then press the **OK** or **▶** button.

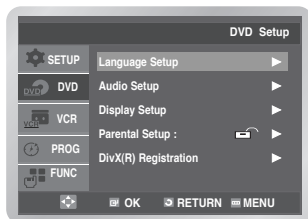

- 2 Press the **OK** or **▶** button again. Press the **▲** or **▼** button to select **Subtitle**, then press the **OK** or **▶** button.

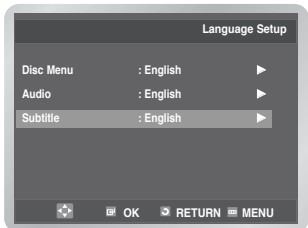

- 3 Press the **▲** or **▼** button to select the required language.

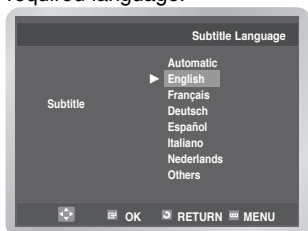

- Select **Automatic** if you want the subtitle language to be the same as the language selected as the audio language.
- Select **Others** if the language you want is not listed.

- 4 Press the **OK** button.

Note


- Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.

Setting Up the Audio Options

- 1 Press the **MENU** button in the stop mode. Press the **▲** or **▼** button to select **DVD**, then press the **OK** or **▶** button.



- 2 Press the **▲** or **▼** button to select **Audio Setup**, then press the **OK** or **▶** button. The **Audio Setup** menu is displayed.

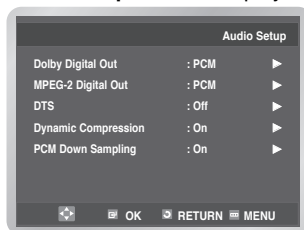

- 3 Press the **▲** or **▼** button to select the required item.

- 4 Press the **OK** or **▶** button to select the required option.

■ Dolby Digital Out

- **PCM**: Converts to PCM (2CH) audio. Select PCM when using the Analog Audio Outputs.
- **Bitstream**: Converts to Dolby Digital Bitstream (5.1CH). Select Bitstream when using the Digital Audio Output.

Note

- Be sure to select the correct Digital Output or no audio will be heard.

■ MPEG-2 Digital Out

- **PCM**: Converts to PCM (2CH) audio. Select PCM when using the Analog Audio Outputs.
- **Bitstream**: Converts to MPEG-2 Digital Bitstream (5.1CH or 7.1CH). Select Bitstream when using the Digital Audio Output.

■ DTS

- **Off:** Doesn't output digital signal.
- **On:** Outputs DTS Bitstream via digital output only. Select DTS when connecting to a DTS Decoder.

■ Dynamic Compression

- **On:** To select dynamic compression.
- **Off:** To select the standard range.

■ PCM Down Sampling


- **On:** Select this when the amplifier connected to the player is not 96KHz compatible. In this case, the 96KHz signals will be down converted to 48KHz.
- **Off:** Select this when the amplifier connected to the player is 96KHz compatible. In this case, all signals will be output with out any changes.

Note


- How to make the **DVD** menu disappear or return to menu screen during set up; Press **RETURN** or **◀** button.
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Setting Up the Display Options

- 1 Press the **MENU** button in the stop mode. Press the **▲** or **▼** button to select **DVD**, then press the **OK** or **▶** button.

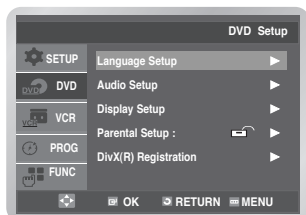

- 2 Press the **▲** or **▼** button to select **Display Setup**, then press the **OK** or **▶** button.

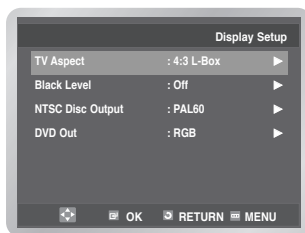

- 3 Press the **▲** or **▼** button to select **TV Aspect**, press the **OK** or **▶** button.



- 4 Press the **▲** or **▼** button to select the required item, then press the **OK** button to select the required option.

■ TV Aspect

Depending on the type of television you have, you may want to adjust the screen setting (Aspect Ratio).

- **4:3 Letter Box :**
Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.
- **4:3 Pan Scan :**
Select this for conventional size TVs when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off).
- **16:9 Wide :**
You can view the full 16:9 picture on your widescreen TV.

■ Black Level

Adjusts the brightness of the screen (**On/Off**).

■ NTSC Disc Output

“**NTSC**” if the screen only has one NTSC-video entrance. If this is not the case, you can choose to leave “**PAL60**” as is.


■ DVD Out

- **RGB**: Sends RGB signal from the AV JACK (SCART terminal).
- **S-Video**: Sends S-VIDEO signal from the AV JACK (S-Video terminal).
- **Video**: Sends COMPOSITE VIDEO signal from the AV JACK (SCART terminal).


Setting Up the Parental Control

The Parental Control function works in conjunction with DVDs that have been assigned a rating which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.


- 1 Press the **MENU** button in the stop mode. Press the **▲** or **▼** button to select **DVD**, then press the **OK** or **▶** button. Press the **▲** or **▼** button to select **Parental Setup**.

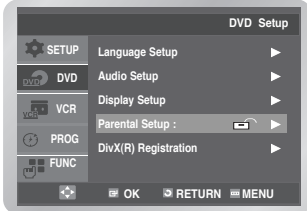


- 2 Press the **OK** or **▶** button. The **Use Password** menu is displayed.

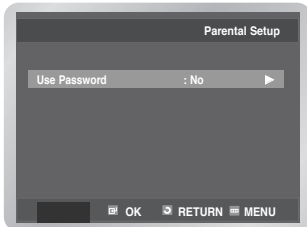


- 3 Press the **OK** or **▶** button again if you want to use a password. The **Enter Password** menu is displayed. Enter your password by pressing the number buttons.

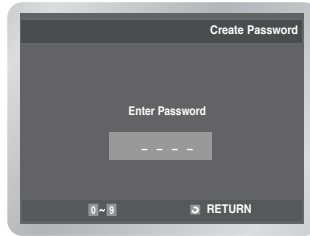

The **Re-enter Password** menu is displayed to confirm the password.

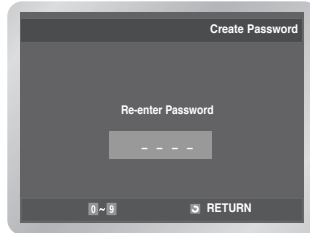


- 4 Enter your password again. The **Use Password** is set to **Yes** and the **Parental Setup** menu is displayed. The DVD-VCR is locked (🔒).

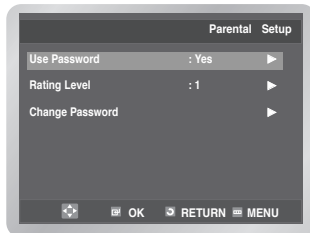

■ Setting up the Rating Level

- 5 Press the **▲** or **▼** button to select **Rating Level**, then press the **OK** or **▶** button.

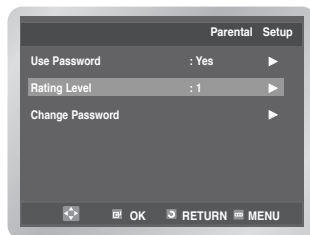





- 6** Press the **▲** or **▼** button to select the required level (e.g. **Level 6**). Press the **OK** or **▶** button.
- Discs that contain Level 7 will now not play.

Changing the Password


- 7** Press the **▲** or **▼** button to select **Change password**.

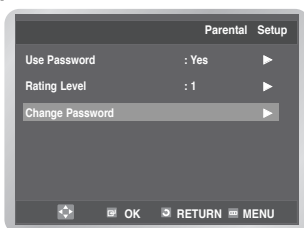

- 8** The **Enter New Password** is displayed. Enter your password by pressing the number buttons.

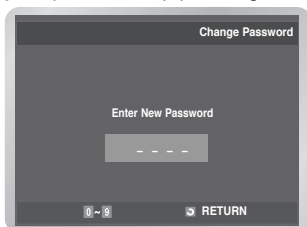

The **Re-enter Password** is displayed to confirm the password.

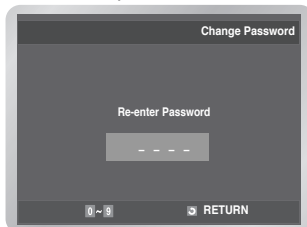


- 9** Enter your password again.
- How to make the **DVD** menu disappear or return to menu screen during set up; Press the **RETURN** or **◀** button.
 - If you have forgotten your password, refer to Forgot Password in the Troubleshooting Guide.


DivX(R) Registration

Please use your registration code to register this DVD-VCR with the DivX(R) Video On Demand service. This will allow you to rent and purchase videos using the DivX(R) Video On Demand format. To learn more go to www.divx.com/vod.


- 1** Press the **MENU** button in the stop mode. Press the **▲** or **▼** button to select **DVD**. The **DVD Setup** menu is displayed.

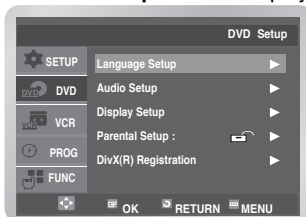

- 2** Press the **OK** or **▶** button. Press the **▲** or **▼** button to select **DivX(R) Registration**.

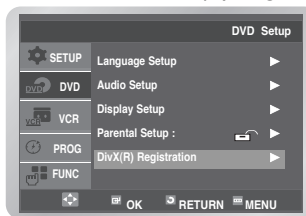

- 3** Press the **OK** or **▶** button. A message is displayed.

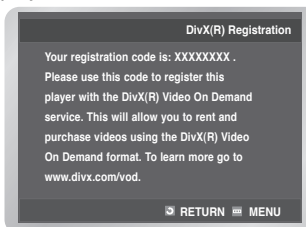

DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc and are used under license.



Firmware Upgrade

Please read the below information before update procedure.

1 The following events may interrupt the update procedure and **may result in permanent damage to DVD-VCR.**

- Unplugging the power cord.
- Power outage.
- Dirt or Scratch in the discs.
- Open a tray door during processing.

2 Playback can only support English Subtitle. If you have any question or any problem, please feel free to contact your nearest SAMSUNG Service Center and agency.

DivX Feature Table

- A DivX disc may not be playable as playback depends on the file format, the recording conditions, the recording method, etc.
- A video file that has not been interleaved supports only voice or video.
- Check the DivX disc format as this is not an error.
- Normal operation is only possible when the screen size is 720X480 pixels or less.
- A maximum of 65 characters for the caption title of a DivX disc is supported.
- Unsupported caption content will be displayed using asterisks (*).

DivX can be divided into Video and Audio.

Supported CODEC formats	DivX3, DivX4, DivX5 (GMC 1WP)
Supported file formats	*.avi, *.mpeg
Supported audio formats	AC3, MP3, WMA
Supported caption formats	*.SMI, *.SRT, *.SUB

How to make an update disc

Write the downloaded file onto a blank CD-R disc, using the following settings.

1 Download the software update file from the Samsung Internet Site (<http://www.samsung.com/Support/ProductSupport/Download/index.aspx>). After checking your DVD-VCR Model name on the rear, download a file using the **Search Your Model/Name** window.

2 Write the file to disc using CD-R driver of your computer.
Software update file name: **PC7CA.rom**
Please do not change the file name.
If you change the file name, DVD-VCR do not recognize the update CD-R.


Note

- Recommended Application Program
 - Nero Burning / Easy CD Creator.. etc
- Option
 - Multisession; No Multisession
 - CD close or Finalized CD
- In order to increase Disc Playability, add a dummy file (over 100MB) together with the update file in CD-R, not CD-RW. (The Dummy File can be used any kind of file except jpg, mp3, wma file. Zip file format is recommended).

Update procedure

1 Insert the update CD-R disc with the software update. It takes about 30 seconds to load the update disc.

2 READING appears at the left upper side of the screen.

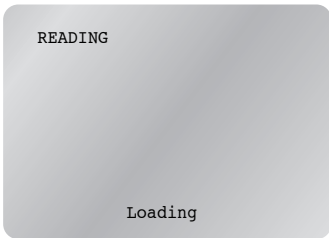

- 3** **ERASE** and **WRITE** appears in turn at the same location for about 40 sec during firmware update.



ERASE
RETR 00


- 4** It will be displayed **DONE** if the update is completed successfully.



DONE
RETR 00

- 5** After update is completed, you have to power off the unit and eject the update disc by using the **OPEN/CLOSE** button once the unit turns on.

- 6** Firmware update is ended. Turn on your player and enjoy a DivX movie.

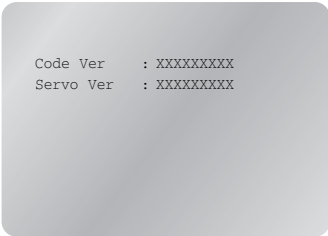

Code Ver : XXXXXXXX
Servo Ver : XXXXXXXX

- In order to check new version like the upper, press the **INFO** button after opening a tray.

Note

- The display can be changed depend on its version and without any notice.

Special Playback Features

During DVD/CD playback you can select from the following special playback options.

To resume normal playback, press the **▶||** button.

■ Still

Press the **▶||** button during playback.

- The picture will still and the audio will mute.
- To resume playback, press the **▶||** button.
- If the player is left in still mode for 5 minutes, it will stop automatically.

Note

- Frame Advance operates only in the forward direction.

■ Frame Advance (Step)

While in playback mode, press the **F.ADV/STEP** button on the remote control to advance one frame at a time.

- Audio is muted during frame advance mode.
- Press the **▶||** button to resume normal playback.

■ Skip Forward/Back

While a CD or DVD disc is in play mode, press the **I◀◀** or **▶▶I** button to jump forward and backward through disc chapters/tracks.

- Skip Forward (**▶▶I**) will jump to the next chapter/track.
- Skip Back (**I◀◀**) will jump to the beginning of the current chapter/track.
- Press the **I◀◀** button again to jump to the beginning of the previous chapter/track.

■ Search Forward/Back

While a disc is in play mode, press the **◀◀** or **▶▶** button to visually search forward/backward at 2X - 4X - 8X - 16X - 32X - 128X speed. Press the **▶||** button to resume normal speed.

- CD : 2X - 4X - 8X - 16X - 32X

■ Slow Motion

During playback, press the **▶||** button to still the image. Then press the **▶▶/▶▶I** button to play in slow motion at variable speeds.

- Each press increases the slow motion speed playback to 1/8, 1/4 or 1/2 normal speed.
- Audio is muted during slow motion playback.

■ Stop/Resume

- Press the ■ button once to stop playback. To resume the DVD/CD from the point where the disc stopped, press the ►II button.
- Press the ■ button twice to completely stop playback. The next time you press the ►II button, the disc will start over from the beginning.

Note

- Slow motion operates only in the forward direction. Slow motion is not available for CD.

Using the Display Function


To view the current Title, Chapter/Track, and counter position, press the **INFO** button during DVD playback. The display screen can also be used to quickly choose a title, chapter/track, or playing time.

1 View the Display

During DVD/CD playback, press the **INFO** button.

- To make the screen disappear, press the **INFO** button again.

DVD

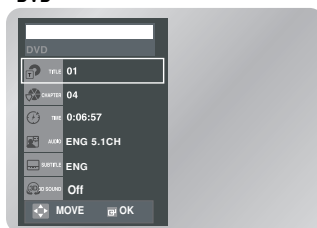

CD



2 Press the ▲ or ▼ button to select the desired item.

3 Press the ◀ or ▶ button to make the desired setup, then press the OK button.

- You may use the number buttons of the remote control to directly access a title, chapter or to start the playback from the desired time.

4 To make the screen disappear, press the **INFO** button again.



TITLE

To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a DVD, each movie will be identified. A DVD may contain several different titles. For example, if a disc contains four different movies, each might be considered a title.



CHAPTER

Most of DVD discs are recorded in chapters so that you can quickly find a specific passage. Each Title on a DVD is usually divided into chapters (similar to tracks on an audio CD).



TIME

Allows playback of the film from a desired time.



AUDIO

Refers to the language of the film soundtrack. In the example, the soundtrack is played in English 5.1CH. A DVD disc can have up to eight different soundtracks.



SUBTITLE

Refers to the subtitle languages available in the disc. You will be able to choose the subtitles language or, if you prefer, turn them off from the screen. A DVD disc can have up to 32 different subtitles.



3D SOUND

A surround sound effect is generated using only two front speakers.

Adjusting the Aspect Ratio (EZ View)

This function may be different depending on the type of disc.

To play using aspect ratio (DVD)

1 Press the **EZ VIEW** button.

- The screen size changes when the button is pressed repeatedly.
- The screen zoom mode operates differently depending on the screen setting in the initial DVD menu.
- To ensure correct operation of the **EZ VIEW** button, you should set the correct aspect ratio in the initial setup.

If you are using a 16:9 TV

For 16:9 aspect ratio discs

- Wide Screen

Displays the content of the DVD title in 16:9 aspect ratio.

- Screen Fit

The top and bottom portions of the screen are cut off. When playing a 2.35:1 aspect ratio disc, the black bars at the top and bottom of the screen will disappear. The picture will look vertically stretched. (Depending on a type of disc, the black bars may not disappear completely.)

- Zoom Fit

The top, bottom, left and right of the screen are cut off and the central portion of the screen is enlarged.

For 4:3 aspect ratio discs

- Normal Screen

Displays the content of the DVD title in 16:9 aspect ratio. The picture will look horizontally stretched.

- Screen Fit

The top and bottom portions of the screen are cut off and the full screen appears. The picture will look vertically stretched.

- Zoom Fit

The top, bottom, left and right portions of the screen are cut off and the central portion of the screen is enlarged.

■ If you are using a 4:3 TV

For 16:9 aspect ratio discs

- 4:3 Letter Box

Displays the content of the DVD title in 16:9 aspect ratio. The black bars will appear at the top and bottom of the screen.

- 4:3 Pan Scan

The left and right portions of the screen are cut off and the central portion of the 16:9 screen is displayed.

- Screen Fit

The top and bottom portions of the screen are cut off and a full screen appears. The picture will look vertically stretched.

- Zoom Fit

The top, bottom, left and right portions of the screen are cut off and the central portion of the screen is enlarged.

For 4:3 aspect ratio discs

- Normal Screen

Displays the content of the DVD title in 4:3 aspect ratio.

- Screen Fit

The top and bottom portions of the screen are cut off and the full screen appears. The picture will look vertically stretched.

 
- Zoom Fit

The top, bottom, left and right portions of the screen are cut off and the central portion of the screen is enlarged.

Selecting the Subtitle Language

Some DVDs provide subtitles in one or more languages. You can use the **SUBTITLE** button to quickly view and change settings.

1 During playback, press the **SUBTITLE** button.



2 Press the ◀ or ▶ button to select the desired subtitle language.

3 Press the ▲ or ▼ button to select **On**.

- To make the menu bar disappear, press the **SUBTITLE** button again.



Note

- The subtitle languages are represented by abbreviations.
- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 32 subtitle languages.
- How to have the same subtitle language come up whenever you play a DVD; Refer to "Using the Subtitle Language" on page 34.

Selecting the Audio Language

Multiple language/audio setup options, such as Dolby Digital 5.1, Dolby Pro Logic or LPCM 2 Channel audio are available on some DVDs. You can use the AUDIO button to quickly view and select the options available on a disc.

- 1 During playback, press the **AUDIO** button.

DVD



CD



- Press the ◀ or ▶ button to select stereo, Left or Right.
- 2 Press the ◀ or ▶ button to select the desired language or audio setup on the DVD.
 - Languages are represented by abbreviations, e.g. **ENG** for English.

Note

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 32 subtitle languages.
- How to have the same audio language come up whenever you play a DVD; Refer to “Using the Audio Language” on page 33.

Changing the Camera Angle


Some DVD Movies provide you with various camera angle views on the same scene if disc contains multiple angles.

- 1 Press the **ANGLE** button.
- 2 Press the ◀ or ▶ button to select a camera angle you may wish to see.




Zoom


- 1 During playback, press the **MENU** button. Press the ▲ or ▼ button to select **FUNC**, then press the **OK** or ▶ button. The **Function** menu is displayed.

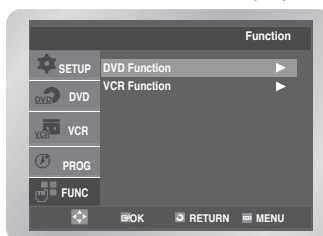

- 2 Press the ▶ button, then press the ▲ or ▼ button to select **ZOOM**.

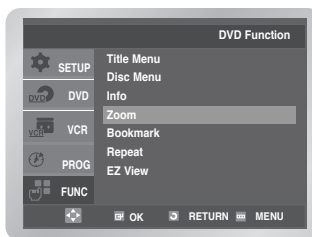

- 3 Press the **OK** or ▶ button. Press the ▲ / ▼ or ◀ / ▶ button to select the part of the screen you want to zoom in on, then press the **OK** button

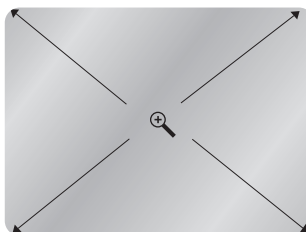

- Press the **OK** button to Zoom in 2X/4X/2X/Normal in order.
- You can also select Zoom function directly using **ZOOM** button on the remote control.

Marks

Up to three Bookmarks can be inserted for a given DVD, allowing you to quickly jump to your favorite scene or song.

- 1 During playback, press the **MARK** button.



- 2 Press the ◀ or ▶ button to select one of the three mark placeholders (- - -). Keep on playing the DVD up to the scene you want to mark, then press the **OK** button. The placeholder (-) is changed to a number (1, 2 or 3).



- You may continue to set up to three marks. Press the **MARK** button again to exit the mark menu.

Recalling a Maked Scene

- 1 During playback, press the **MARK** button.
- 2 Press the ◀ or ▶ button to select the mark you want to recall.
- 3 Press the ▶II button to play the mark.

Clearing Mark

- 1 During playback, press the **MARK** button.
- 2 Press the ◀ or ▶ button to select the mark you want to delete.
- 3 Press the **CLEAR** button to delete the mark.
 - Press the **MARK** button again to exit the mark menu.

Note

 
- Depending on the disc, the mark function may not work.

Repeat Chapter/Title


You can repeat a single chapter or a complete title.

- 1 Press the **REPEAT** button while in playback mode to open the repeat menu. The current repeat mode is displayed.
- 2 Press the ◀ or ▶ button to select **Chapter/Title**. Press the **OK** button to repeat the current chapter/Title.

DVD



CD

 


- The menu will display **Track** in place of **Chapter** if you are playing a CD.


Cancel Chapter/Title

- 1 Press the **REPEAT** button to open the repeat menu.
- 2 Press the ◀ or ▶ button to selected **Off**, then press the **OK** button.

 DVD



CD

 

- It is available to press the **CLEAR** button in order to stop repeat play.

A to B Repeat

 
A to B Repeat feature enables you to repeat the designated section on a DVD or CD. To activate, mark where to start (A) and where to end (B) of the section you want to watch.

- 1 Press the **REPEAT** button while in playback mode, then press the ◀ or ▶ button to select **A-**.

DVD




CD




- 2 Press the **OK** button at the beginning of the segment you want to repeat (Point A). The **B** is selected.

 DVD



CD

 


- 3 Press the **OK** button again at the end of the segment you want to repeat (Point B). The segment will begin repeating in a continuous loop.

Cancel A-B Repeat


- 1 Press the **REPEAT** button to open the repeat menu.

- 2 Press the ◀ or ▶ button to selected **Off**, then press the **OK** button.

 DVD



CD

 


- It is available to press the **CLEAR** button in order to stop repeat play.

MP3/WMA Play

If you insert an MP3/WMA Disc into the DVD-VCR, you can see the folder directory.


MP3/WMA Play Function

- 1 Press the **▲** or **▼** button to select the desired music folder, then press the **OK** button.

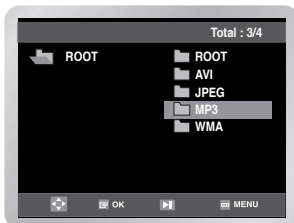


- Up to 7 music folders can be displayed at a time. If you have more than 8 folders on a disc, press the **▼** button to display them.

- 2 Press the **▲** or **▼** button again to select a music file. Press the **OK** button to begin playback of a music file.

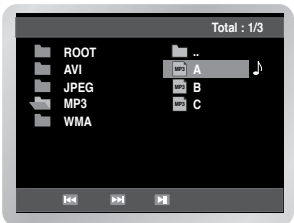

Repeat

- 1 Press the **REPEAT** button in play mode to hear only music continuously and press it once again to release.

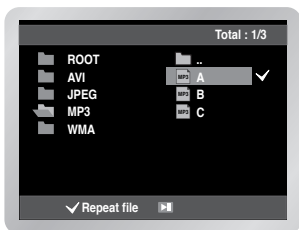

CD-R MP3/WMA discs

When playing CD-R/MP3 or WMA discs, please follow all the recommendations for CD-R above, plus the comments below:

Your MP3 or WMA files should be ISO 9660 or JOLIET format.

ISO 9660 format and Joliet MP3 or WMA files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. These two formats are the most widely used.

When naming your MP3 or WMA files do not exceed 8 characters, and place ".mp3, .wma" as the file extension.

General name format of: Title.mp3. or Title.wma. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (,./,\,=,+).

Use a decompression transfer rate of at least 128Kbps when recording MP3 files.

Sound quality with MP3 files basically depends on the rate of compression /decompression you choose. Getting audio CD quality sound requires an analog/digital sampling rate, that is conversion to MP3 format, of at least 128Kbps and up to 160Kbps. However, choosing higher rates, like 192Kbps or more, only rarely give better sound quality. Conversely, files with decompression rates below 128Kbps will not be played properly.

Use a decompression transfer rate of at least 64Kbps when recording WMA files.

Sound quality with WMA files basically depends on the rate of compression /decompression you choose. Getting audio CD quality sound requires an analog/digital sampling rate, that is conversion to WMA format, of at least 64Kbps and up to 192Kbps. Conversely, files with decompression rates below 64Kbps or over 192Kbps will not be played properly.

Do not try recording copyright protected MP3 files.

Certain "securized" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows MediaTM (registered trade mark of Microsoft Inc) and SDMITM (Registered trade mark of The SDMI Foundation). You cannot copy such files.

Important :

The above recommendations cannot be taken as a guarantee that the DVD-VCR will play MP3 recordings, or as an assurance of sound quality. You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).

Program & Random Play/ (CD/MP3/WMA)


You can listen to songs randomly or in the desired sequence.

■ Program Play

- 1 Press the **MODE** button in the stop mode.
Press the ◀ or ▶ button to select **PROGRAM**.
Press the **OK** button.



- 2 Press the ▲/▼, ◀/▶ buttons to select the first track to add to the program. Press the **OK** button. The selection numbers are displayed in the **Program Order** box.

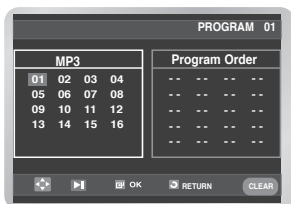


- 3 Press the ▶II button.
The disc will be played in programmed order.

■ Cancel Program play

During playback, press the **CLEAR** button.

■ Random Play

- 1 Press the **MODE** button in the stop mode.
- 2 Press the ◀ or ▶ button to select **RANDOM**.
Press the **OK** button.
The disc will be played in random order.

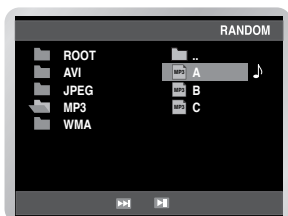


- Depending on the disc, the Program and Random Play functions may not work.
- To resume normal play, press the **CLEAR** button.


Picture CD Playback

If you insert a Picture (JPEG) CD Disc into the DVD-VCR, you can see the folder directory.

- 1 Press the ▲ or ▼ button to select the picture you want to view, then press the **OK** button.
The selected picture is displayed.

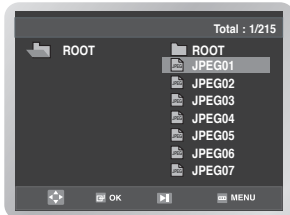


- 2 Press the I◀◀ or ▶▶I button to display the previous or next picture.

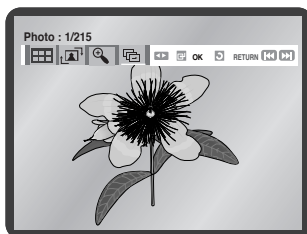

Note


- If no buttons on the remote control are pressed for 10 seconds, the menu bar will disappear.
Press the **DISC MENU** button on the remote control to display the menu bar.

Album Mode

Press the ◀ or ▶ button to select .

Press the **OK** button.

The album mode is displayed.

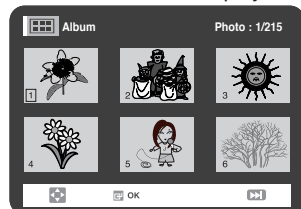


- Press the ▲/▼, ◀/▶ buttons to select the required picture, then press the **OK** button.
The selected picture is displayed.
- Press the I◀◀ or ▶▶I button to display the previous or next 6 pictures.

Rotation

Press the ◀ or ▶ button to select .

Each time the **OK** button is pressed, the picture rotates 90 degrees clockwise.

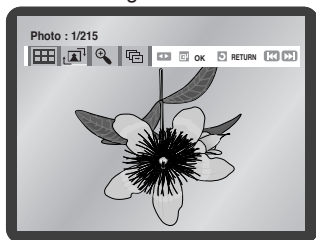


Zoom

Press the ◀ or ▶ button to select .

Each time the **OK** button is pressed, the picture is enlarged up to 4X.



(Normal → 2X → 4X → Normal)

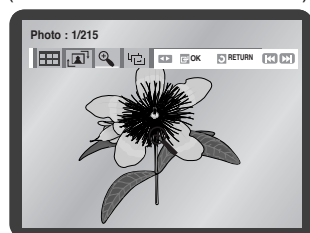




Slide show

Press the ◀ or ▶ button to select .

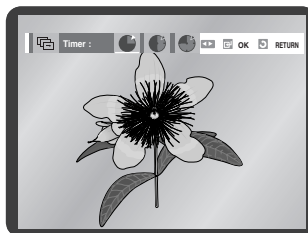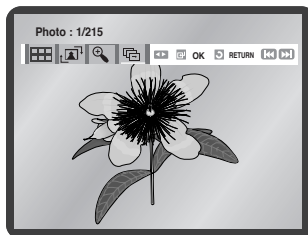Press the **OK** button. The 3 icons are displayed for time interval.



Press the ◀ or ▶ button to select one of these.
Press the **OK** button.



-  The pictures change automatically with about an 6 second interval.
-  The pictures change automatically with about an 12 second interval.
-  The pictures change automatically with about an 18 second interval.

 
 

- Depending on the file size, each interval between images may take longer or shorter than the manual suggests.

CD-R JPEG Discs


- Only files with the ".jpg" and ".JPG" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- The name of the JPEG file may not be longer than 8 characters and should contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- When playing a Kodak Picture CD, only the JPEG files in the pictures folder can be played.
- Picture discs other than Kodak Picture CD may take longer to start playing or may not play at all.

DivX/MPEG4 Playback



- 1 When the disc is inserted, the file structure of the disc will be shown. Depending on the file format, a different icon will appear next to each file. The  and  files will have been highlighted.


Use  or  button to select the movie file, and then press OK or .

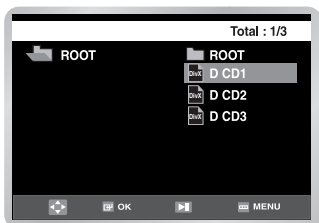Result : When the 'Reading Index.....' message is displayed, wait for a second or two. The movie will be played back.



If the "Cannot support" message is displayed, the selected file cannot be played back.

- 2 To navigate to a specific time while viewing the movie, press the **INFO** button. The file format of the current file ( or ) and time information will be displayed.

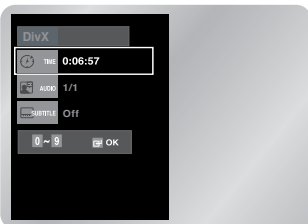



- 3 Use the number buttons on the remote control to enter the time to jump to that time in the movie.

DivX/MPEG4 Special Playback Features

During DivX/MPEG4 playback you can select from the following special playback options.


1 Still

Press the  button on the remote control during playback.

 
 
- The picture will still and the audio will mute.
- To resume playback, press the  button.
- If the player is left in Still mode for 5 minutes, it will stop automatically.

2 Frame Advance (Step)

While in playback mode, press the **F.ADV/STEP** button on the remote control to advance one frame at a time.



- Audio is muted during Frame Advance mode.
- Press  to resume normal playback.

3 Slow Motion

During playback, press the  button to Still the image. Then use the Search  to play in slow motion at variable speeds.

- Each press increases the slow motion speed playback to 1/8, 1/4 or 1/2 normal speed.
- Audio is muted during slow motion playback.
- The Search function may not operate depending on the condition of the disc.

4 Stop/Resume

- Press the  button once to stop playback. To resume the DivX/MPEG4 from the point where the disc stopped, press the  button.

5 Search Forward/Backward


- During play, press the **SEARCH** button and press again to search at faster speed (2X, 4X, 8X).

Note


- Frame advance and slow motion operate only in the forward direction.

6 Zoom

During play, press the MENU button on the remote control. Then press the ▲ or ▼ button to select the **FUNC**, then press the **OK** or ► button. The **Function** menu is displayed.

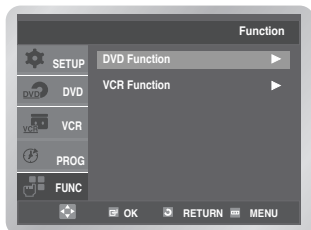

- Press the ▲ or ▼ button to select **DVD Function**. Press the **OK** or ► button.
- Press the ▲ or ▼ button to select **ZOOM**, then press the **OK** button.

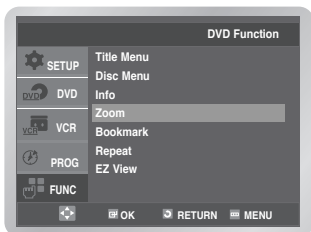

- Press the ▲/▼ or ◀/ ▶ button to select the part of the screen you want to zoom in on, then press the **OK** button.

The screen will be enlarged to twice the normal size.

Auto Scaling : CIF(100kbps)~D1(784kbps) resolution. If the file resolution is times automatically. So you can see the more larger screen.

Technical Specifications

General	Rated voltage	AC 220 - 240V, 50Hz
	Power consumption	19Watts
	Weight	3.9Kg
	Size	430mm X 282mm X 82mm
	Operating ambient temperature	+5°C ~ +40°C
	Installation conditions	Operation position : Horizontal, Relative humidity : Below 75%
Input	Video input (Rear)	Euro Scart socket : 1.0Vp-p (unbalanced)
	Audio input (Rear)	Euro Scart socket : -8dBm, 47Kohm unbalanced
	Input (Front)	RCA jack
Output	RF Out	UHF 21~ 69 (Initial CH60)
	Audio (DVD, VCR)	RCA jack, Euro Scart socket
	Audio (DVD only)	COAXIAL, RCA jack
	Video (DVD, VCR)	RCA jack, Euro Scart socket
	Video (DVD only)	S-Video out, Component RGB out : Euro Scart socket
VCR	Tape format	VHS type video tape
	Colour system	PAL,NTSC4.43, NTSC playback on PAL TV
	Tuning system	I
	Video S/N	Above 43dB (standard recording)
	Resolution	Above 240 lines (standard recording)
	Audio S/N	Above 68dB (Hi-Fi), 39dB (Mono)
	Audio frequency characteristics	20Hz - 20KHz (Hi-Fi)
DVD	Disc	DVD, CD.
	Audio S/N	100dB
	Audio dynamic range	95dB

Troubleshooting Guide (VCR)

Before contacting the Samsung after-sales service, perform the following simple checks.


If you are unable to solve the problem after reading the below instructions, note:

- The model and serial number on the rear of your DVD-VCR.
- The warranty information.
- A clear description of the problem.

Then contact your nearest SAMSUNG after-sales service.

Problem	Solution
No power	<ul style="list-style-type: none">◆ Check that the power plug is connected to a wall outlet.◆ Have you pressed the STANDBY/ON button?
You cannot insert a video cassette	<ul style="list-style-type: none">◆ A video cassette can only be inserted with the window side up and the safety tab facing you.
The television programme was not recorded	<ul style="list-style-type: none">◆ Check the DVD-VCR aerial connections.◆ Is the DVD-VCR tuner properly set?◆ Check if the safety tab is intact on the cassette.
Timer recording was unsuccessful	<ul style="list-style-type: none">◆ Was the STANDBY/ON button pressed to activate the timer?◆ Re-check the recording start/stop time settings.◆ If there was a power failure or interruption during timer recording, the recording will have been cancelled.
You cannot see normal broadcasts	<ul style="list-style-type: none">◆ Check the tuner or external setting. It should be on tuner.◆ Check the TV or VCR aerial connections.
Noise bars or streaks on playback	<ul style="list-style-type: none">◆ Press the TRK (Δ or ∇) buttons to minimize this effect.
When the ► button is pressed during playback, the still picture has severe "noise bars" streaks	<ul style="list-style-type: none">◆ A still picture may have "noise bars", depending on the condition of the tape. Press the TRK (Δ or ∇) buttons during slow motion to minimize this effect.
Video Head Cleaning	<ul style="list-style-type: none">◆ If poor pictures appear on a variety of cassettes, the video heads may need cleaning. This is not a common problem and unless it appears, the heads should not be cleaned. When cleaning the video heads, read all instructions provided with the head cleaning cassette. Incorrect head cleaning can permanently damage the video heads
If when tuning in your TV to the DVD-VCR, TV does not find the Screen or the pattern when found suffers from interference, it may be due to the DVD-VCR output channel clashing with the normal TV transmissions in your area. To prevent this you will need to change the DVD-VCR output channel in the following way.	<ol style="list-style-type: none">1. Remove the aerial input plug the socket marked (Aerial symbol) on the rear of the DVD-VCR.2. Carry out the instructions "Tuning Your Television for the DVD-VCR" (See page 15).3. Carry out the instructions "Setting the VCR output Channel" (See page 20), move the channel number several channels down from the original setting. (Example: from 60 to 69).4. Replace the aerial plug into the socket marked (Aerial symbol) on the rear of the DVD-VCR.5. Re-tune your TV to the DVD-VCR again by following instructions "Tuning Your Television for the DVD-VCR" (See page 15).6. If the problem still exists repeat steps 1 to 5 moving several more channels away from the original setting.

Troubleshooting Guide (DVD)

Problem	Solution	Page
Disc does not play.	<ul style="list-style-type: none"> ◆ Ensure that the disc is installed with the label side facing up. ◆ Check the region number of the DVD. ◆ This DVD-VCR cannot play CD-ROMs, DVD-ROMs, etc. Insert a DVD, or a CD. 	P3
5.1 channel sound is not being reproduced.	<ul style="list-style-type: none"> ◆ 5.1 channel sound is reproduced only when the following conditions are met.: <ol style="list-style-type: none"> 1) The DVD-VCR is connected with the proper amplifier. 2) The disc is recorded with 5.1 channel sound. ◆ Check whether the disc being played has the "5.1 ch" mark on the outside. ◆ Check if your audio system is connected and working properly. 	P12 P34~35
The  icon appears on screen.	<ul style="list-style-type: none"> ◆ The features or action cannot be completed at this time because: <ol style="list-style-type: none"> 1. The DVD's software restricts it. 2. The DVD's software doesn't support the feature (e.g., angles). 3. The feature is not available at the moment. 4. You've requested a title or chapter number or search time that is out of range. 	P33~48
Playback mode differs from the Setup menu selection.	<ul style="list-style-type: none"> ◆ Some of the functions selected in the Setup menu may not work properly if the disc is not encoded with the corresponding function. 	P33~37
The screen ratio cannot be changed.	<ul style="list-style-type: none"> ◆ The screen ratio is fixed on your DVDs. 	P35
No audio.	<ul style="list-style-type: none"> ◆ Make sure you have selected the correct Digital Output in the Audio Options Menu. 	P34
Forgot password.	<ul style="list-style-type: none"> ◆ Press STANDBY/ON with no disc in the unit. Press the ►► button on the front panel for five seconds. Power off and on the DVD-VCR by pressing STANDBY/ON button. The parental mode is now unlocked as indicated on the display. You can now set your rating level and change your password to a new number. 	P36~37
If you experience other problems.	<ul style="list-style-type: none"> ◆ Check the contents of the instruction book that contains the explanations regarding the current problem and follow the procedure once again. ◆ If the problem still cannot be solved, please contact your nearest authorized service center. 	



UNITED KINGDOM



**REPUBLIC OF
IRELAND**

This Samsung product is warranted for the period of twelve (12) months from the original date of purchase, against defective materials and workmanship. In the event that warranty service is required, you should return the product to the retailer from whom it was purchased.

However, Samsung Authorised Dealers and Authorised Service Centres in other EC Countries will comply with the warranty on the terms issued to purchasers in the country concerned. In case of difficulty, details of our Authorised Service Centres are available from:

**Samsung Electronics U.K. Ltd.
Customer Care Centre
PO Box 17243
Edinburgh, EH11 4YB
United Kingdom
Tel : 0870 SAMSUNG (7267864),
Fax : 0870 7221127 (United Kingdom)
Tel : 0818 717 100,
Fax : +44 (0)870 7221127 (Republic of Ireland)
Web : www.samsung.com/uk**

■ WARRANTY CONDITIONS

1. The warranty is only valid if, when warranty service is required, the warranty card is fully and properly completed and is presented with the original invoice or sales slip or confirmation, and the serial number on the product has not been defaced.
2. Samsung's obligations are limited to the repair or, at its discretion, replacement of the product or the defective part.
3. Warranty repairs must be carried out by Authorised Samsung Dealers or Authorised Service Centres. No re-imbursement will be made for repairs carried out by non Samsung Dealers and, any such repair work and damage to the products caused by such repair work will not be covered by this warranty.
4. This product is not considered to be defective in materials nor workmanship by reason that it requires adaptation in order to conform to national or local technical or safety standards in force in any Country other than the one for which the product was originally designed and manufactured. This warranty will not cover, and no re-imbursement will be made for such adaptation nor any damage which may result.
5. This warranty covers none of the following:
 - a) Periodic check ups, maintenance and repair or replacement of parts due to normal wear and tear.
 - b) Cost relating to transport, removal or installation of the product.
 - c) Misuse, including the failure to use this product for its normal purposes or incorrect installation.
 - d) Damage caused by Lightning, Water, Fire, Acts of God, War, Public Disturbances, incorrect mains voltage, improper ventilation or any other cause beyond the control of Samsung.
6. This warranty is valid for any person who legally acquired possession of the product during the warranty period.
7. The consumers statutory rights in any applicable national legislation whether against the retailer arising from the purchase contract or otherwise are not affected by this warranty. Unless there is national legislation to the contrary, the rights under this warranty are the consumers sole rights and Samsung, its subsidiaries and distributors shall not be liable for indirect or consequential loss or any damage to records, compact discs, videos or audio taper or any other related equipment or material.

SAMSUNG ELECTRONICS (U.K.) LTD.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Region	Country	Customer Care Center	Web Site
North America	CANADA	1-800-SAMSUNG (7267864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG (7267864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG (7267864)	www.samsung.com
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421 4004-0000	www.samsung.com/br
	CHILE	800-726-7864 (SAMSUNG)	www.samsung.com/cl
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-7267-864	www.samsung.com/latin
	VENEZUELA	0-800-100-5303	www.samsung.com/latin
	COLOMBIA	01-8000112112	www.samsung.com.co
Europe	BELGIUM	02 201 2418	www.samsung.com/be
	CZECH REPUBLIC	844 000 844 Distributor pro Českou republiku : Samsung Zrt., česká organizační složka Vyskočilova 4, 14000 Praha 4	www.samsung.com/cz
	DENMARK	38 322 887	www.samsung.com/dk
	FINLAND	09 693 79 554	www.samsung.com/fi
	FRANCE	3260 SAMSUNG or 08 25 08 65 65 (€ 0,15/Min)	www.samsung.com/fr
	GERMANY	01805 - 121213 (€ 0,14/Min)	www.samsung.de
	HUNGARY	06-80-SAMSUNG (7267864)	www.samsung.com/hu
	ITALIA	800-SAMSUNG (7267864)	www.samsung.com/it
	LUXEMBURG	0032 (0)2 201 24 18	www.samsung.lu
	NETHERLANDS	0900 20 200 88 (€ 0,10/Min)	www.samsung.com/nl
	NORWAY	231 627 22	www.samsung.com/no
	POLAND	0 801 801 881	www.samsung.com/pl
	PORTUGAL	80 8 200 128	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG (726786)	www.samsung.com/sk
	SPAIN	902 10 11 30	www.samsung.com/es
	SWEDEN	08 585 367 87	www.samsung.com/se
	U.K	0870 SAMSUNG (7267864)	www.samsung.com/uk
	Republic of Ireland	0818 717 100	www.samsung.com/uk
CIS	Switzerland	0800-7267864	www.samsung.com/ch
	RUSSIA	8-800-200-0400	www.samsung.ru
	KAZAHSTAN	8-800-080-1188	www.samsung.kz
	UZBEKISTAN	8-800-120-0400	www.samsung.uz
	UKRAINE	8-800-502-0000	www.samsung.com/ur
	LITHUANIA	8-800-77777	www.samsung.lt
	LATVIA	800-7267	www.samsung.com/lv/index.htm
	ESTONIA	800-7267	www.samsung.ee
Asia Pacific	AUSTRALIA	1300 362 603	www.samsung.com/au
	CHINA	800-810-5858, 010-6475 1880	www.samsung.com.cn
	HONG KONG	3698 - 4698	www.samsung.com/hk
	INDIA	3030 8282 1800 110011	www.samsung.com/in
	INDONESIA	0800-112-8888	www.samsung.com/id
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1800-10-SAMSUNG (7267864)	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG (7267864)	www.samsung.com/sg
	THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th
	TAIWAN	0800-329-999	www.samsung.com/tw
Middle East & Africa	VIETNAM	1 800 588 889	www.samsung.com/vn
	SOUTH AFRICA	0860 7267864 (SAMSUNG)	www.samsung.com/za
	U.A.E	800SAMSUNG (7267864) 8000-4726	www.samsung.com/mea



Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products,
please contact the SAMSUNG customer care centre.

☎ 0870 242 0303 / www.samsung.com/uk

Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.